



# **ZX100 IP PBX**

## **User's Manual**

The information contained in this document is subject to change at any time without prior notification. Specifications of the product are subject to change at any time without notice. If you want to learn more info about our product, please visit our web [www.zycoo.com](http://www.zycoo.com).



## TABLE OF CONTENTS

<b>Chapter1</b>	<b>Brief Introduction.....</b>	<b>3</b>
<b>Chapter2</b>	<b>Safety Notice.....</b>	<b>4</b>
<b>Chapter3</b>	<b>ZX100 Specification.....</b>	<b>5</b>
	3.1 Model.....	5
	3.2 System Features.....	5
	3.3 Interface&Panel.....	6
	3.4 Default configuration.....	7
	3.5 Default Feature Key.....	7
<b>Chapter4</b>	<b>Login in Home Page.....</b>	<b>8</b>
<b>Chapter5</b>	<b>Basic Configuration.....</b>	<b>10</b>
	5.1 Configure Extensions.....	10
	5.2 Trunk.....	11
	5.3 Outbound Routers.....	13
<b>Chapter6</b>	<b>Inbound Control.....</b>	<b>15</b>
	6.1 Inbound Routers.....	15
	6.2 IVR (Interactive Voice Response).....	15
	6.3 IVR Prompts.....	16
	6.4 Ring Groups.....	17
<b>Chapter7</b>	<b>Advanced Configuration.....</b>	<b>19</b>
	7.1 Options.....	19
	7.2 Voice Mail.....	19
	7.2.1 General Settings.....	20
	7.2.2 SMTP settings.....	21
	7.2.3 Email settings.....	22
	7.3 Conferencing.....	22
	7.4 Music On Hold.....	23
	7.5 Music On Ringback.....	24
	7.6 Call Parking.....	24
	7.7 DISA Settings.....	25
	7.8 Follow Me.....	26
	7.9 Paging and Intercom.....	27
	7.10 Monitor.....	28
	7.11 Time Based Rules.....	29
<b>Chapter8</b>	<b>Status Display.....</b>	<b>30</b>
	8.1 Monitor List.....	30
	8.1 Call Logs.....	30
	8.2 Register Status.....	31
	8.3 System Info.....	31
<b>Chapter9</b>	<b>Network Settings.....</b>	<b>32</b>



9.1 Network and Country.....	32
9.1.1 WAN Port Settings.....	32
9.1.2 LAN Port Settings.....	32
9.1.2 Country Settings.....	33
9.2 Route.....	33
9.2.1 Route Settings.....	33
9.2.2 Static Routing.....	34
9.2.3 Routing Table.....	35
9.4 NAT Map.....	35
9.5 IP Filter.....	36
9.3 DDNS&VPN.....	37
9.2.1 DDNS Settings.....	37
9.2.2 VPN Settings.....	38
<b>Chapter10 System Management.....</b>	<b>39</b>
10.1 Time Settings.....	39
10.1.1 NTP Settings.....	39
10.1.2 Manual Time Settings.....	39
10.2 Management.....	40
10.3 Backup.....	40
10.4 Upgrade.....	41
<b>Chapter11 Operating Instruction.....</b>	<b>43</b>
11.1 How to link the ZX100 IP PBX to the interwork.....	43
10.1.1 IP PBX behind the Router.....	43
10.1.2 IP PBX behind the Modem.....	43
11.2 How to log in the IP PBX system.....	44
11.3 How to make a internal call.....	45
11.4 How to make an outbound call.....	46
11.4.1 Make call via PSTN trunk.....	46
11.4.2 Make call via VoIP trunk.....	48
11.5 How to make an incoming call.....	50
11.6 How to Set an incoming call to IVR based time rule.....	50
11.7 How to link two ZX100 IPPBX in the same network.....	54
11.8 How to link two IPPBX in different network.....	57
11.9 How to resolve problems about hearing only on one side.....	59
<b>Chapter12 How to use Skype account in ZX100.....</b>	<b>61</b>
12.1 Register for Skype Manager.....	61
12.2 Create a SIP Profile and buy a Channel Subscription.....	61
12.3 Allocate Skype Credit to the SIP Profile.....	62
12.4 Configure your Skype for SIP certified PBX for outbound calls.....	63
12.5 Make an outbound call.....	64
12.6 Configure your Skype for SIP certified PBX for inbound calling.....	64
12.7 Set up a business account to test inbound calls from people with Skype.....	64
12.8 Make a test inbound call from Skype.....	65
12.9 Assign an Online Number to receive calls from landlines and mobile phones.....	65
12.10 Make a test inbound call from a landline or mobile phone.....	65



## **Chapter1 Brief Introduction**

Thank you for your purchasing the ZX100 series of IP PBX with powerful network function,such as NAT map,router,VPN,Firewall,DDNS,etc. The all-in-one ZX100 IP PBX can not only provide the traditional basic PBX features(call hold, call forwarding, call waiting and so on)as well as enhanced features such as recording,visual voice mail, music on hold ,and auto attendant. In addition, the ZX100 IP PBX supports innovative functionality like private VoIP networking, remote access, superior VoIP voice quality with advanced audio processing, and the revolutionary ability to traverse a NAT and firewall. With Zycoo VoIP solutions, the middle business can quickly deploy VoIP networks to connect multiple branch locations over the Internet without the need to change the current equipment or dial plan. By using the ZX100 IP PBX, the customers can take advantage of the VoIP services provided by the ITSPs(Internet Telephony Service Providers)or traditional telephony services, reduce intra-company telephony expenses, and allow VoIP remote access anywhere via the internet.



## **Chapter2 Safety Notice**

Please read the following safety notices before installing or using this IP PBX. They are crucial for a safe and reliable operation of the device.

- Before using the external power supply in the package, please check with residential power voltage. Inaccurate power voltage may cause fire and damage.
- Please do not damage the power cord. If power cord or plug is impaired, do not use it, otherwise, it may cause fire or electric shock.
- The plug-socket combination must be accessible at all times because it serves as the main disconnecting device.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- Do not install the device in places where there is direct sunlight. Also do not place the device on carpets or cushions. It may cause fire or breakdown.
- Avoid exposing the device to high temperature, below -10°C or high humidity. Avoid wetting the unit with any liquid.
- Do not attempt to open it. Non-expert handling to the device could damage it. Consult your authorized dealer for help, or else it may cause fire, electric shock or breakdown.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with soft cloth that has been slightly dampened in a mild soap and water solution.
- When lightning, do not touch power plug or phone line, it may cause an electric shock.
- Do not install this device in an ill-ventilated place.
- You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.



## Chapter3 ZX100 Specification

### 3.1 Model

ZYCOO ZX100 Series IPPBX product line include **ZX100-16,ZX100-E2**, so far, since they have almost the same software and structure so we will use ZX100-A16 as the demo unit on this article.

	Model	FXS	FXO	E1
<b>ZX100-A16</b>	A16016	0	16	0
	A16214	2	14	0
	A16412	4	12	0
	A16610	6	10	0
	A16808	8	8	0
<b>ZX100-E1</b>	E1	0	0	1

### 3.2 System Features

ZX100 series of IP PBX is not only the full feature phone system, but also a professional router device. The all-in-one ZX100 IP PBX can not only provide the traditional basic PBX features (call hold, call forwarding, call waiting and so on) as well as enhanced features such as recording server, voice mail server, conference server, etc. In addition, it supports powerful network management, such as NAT map, router, VPN, Firewall, DDNS, etc

- Up to 80 concurrent calls.
- Above 1000 registers
- Up to 1000 hours recording (can be extended)
- Configuration by Web
- Built-in SIP/IAX Server
- Build in Voice Mail Server
- Codec: G.711-Ulaw, G.711-Alaw, G.726, G.729, GSM, SPEEX
- SIP/IAX Extensions (connect with IP Phone)
- Zap Extensions (connect with Analog Phone)
- Call Forward/Call Hold/Call Transfer/Call Waiting/Caller ID
- Flexible Dial Plan
- Ring group
- Conference Room
- IVR and Auto attendant
- Multimedia Music On Hold and Ring Back
- DISA setting
- Call parking
- Call Paging and intercom
- Follow me Setting
- Call Logs check and download
- Support IP Phone with Key function



- BLF(Busy Lamp Field)
- Static/DHCP/PPPoE network access
- System backup and store
- Set system time manually
- VPN Client (support N2N)
- DDNS Client (support Dyndns.org)
- Router setting
- NAT map
- IP Filter
- Codec Negotiation/Echo cancelation/VAD.etc
- FAX T.38

### 3.3 Interface&Panel

Here, we take ZX100-A16 as the sample to show the interface and the indicators at the back and frond panel.

#### 1) Back panel



- 16 \* Analog Ports
- 2 \* Network Interface (RJ45)
- 1 \* Power Interface(DC 110V~240V)
- 1 \* Power Switch

#### 2) Frond Panel



Mark	Function	Status	Description
PWR	Power Status	On	Power On
		Off	Power Off
HDD	Disk Status	Wink	System working
		Off	System Failed
PWR	Power Button		Power On/Power Off the system
RST	Reset Button		Restart the system
LCD	System Info		Display the current System info
1-16	Analog Modules Status	Green	FXS/FXO channels
		Off	Failed

#### 3) Hardware



- CPU:ATOM N270, 1.6 Ghz x86 CPU
  - RAM: 2 GB DDR2 RAM
  - Storage: 320G mobile hard disk drive
  - PSU: 200W Power Supply with industry standard
  - Dimensions: W: 465 mm, H: 44.5 mm , D: 370 mm
  - Weight: 7.0Kg
- 4) environmental requirements:
- temperature: -10 °C -45 °C
  - Storage temperature: -30 °C -65 °C
  - humidity: 10-80% no dew
  - Power: AC 100~240V
- 5) Packing List
- ZX100 IPPBX      1
  - Power Cable      1
  - VGA Cable        1
  - USB Cable        2

### 3.4 Default configuration

1. WAN port IP address: <http://192.168.1.100:9999>
2. LAN port IP address: <http://192.168.10.100:9999>
3. Web GUI username: **admin**
4. Web GUI password: **admin**


### 3.5 Default Feature Key

1. Press '\*\*11'      Playback the IP Address of WAN port
2. Press '\*\*12'      Playback the IP Address of LAN port
3. Press '600'        Get into the Voicemail Box
4. Press '900'        Get into the Meeting
5. Press '#'          Blind Transfer
6. Press '\*2'         Attended Transfer
7. Press '\*'          Disconnect Call




## Chapter4 Login in Home Page

After connecting the IP PBX to the local area network. Launch the web browser on a computer which is in this local area network. Enter the IP address for the system (WAN port IP address **http://192.168.1.100:9999**, LAN port IP address **http://192.168.10.100:9999**). The start web page will appear like this:

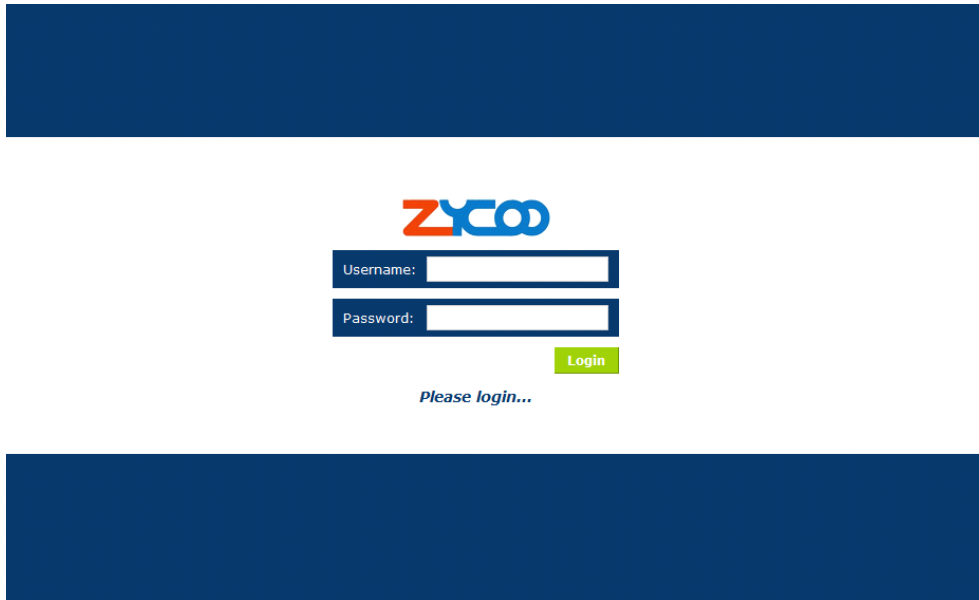

Enter Username and password (default username is **admin**, password is **admin**), then click "login". Once the login is successful, the home page will be display:

**Noted:** you have to add a network segment same with the WAN ports if your PC is not at 192.168.1.XXX.

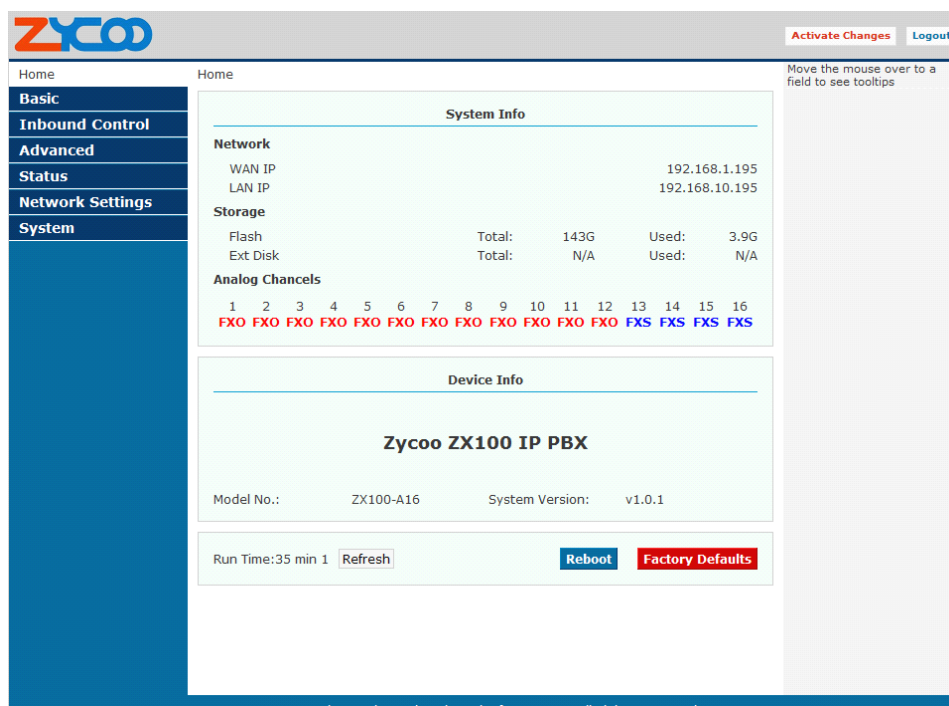

With the zycoo GUI, you can configure extensions, conference, voicemail, Dial Plan and etc. Each page of the GUI has three columns:



The left column present all the options tab that you can program the system. Click the tab to go to setting page of different options.

The middle column contains the primary content for each page.

The right column of the user interface contains Tooltips. This area provides brief description for any options of the GUI

The home page is used for logout, Reboot and Factory Defaults.

- **Logout:** To log out the zycoo GUI.
- **Reboot:** Reboot the IP PBX system
- **Factory Defaults:** Restore all settings to factory default.
- **Activate change:** Made the change active for the current configuration after you make a configuration on some page.



## Chapter5 Basic Configuration

### 5.1 Configure Extensions

Click the Extension tab and you will see the extensions setting, your created users are in this page. There are 30 users in your extensions list as default setting, you can add new extensions or remove the existing extensions.

Extensions Settings include:

- **Extension** The extension is assigned to the defined user.
- **Name** The full name of the individual assigned to this extension.
- **Password** The password is used to Extension registered
- **VM Password** The password is used to access voicemail for the specified Extension
- **E-mail** Set the user's E-mail
- **Caller ID** Identifies the Caller ID presented when the listed extension dials out
- **Analog Phone** A drop-down menu is available to identify the analog phone port which this extension will access.
- **Dial Plan** You can choice dial plan based on the extensions' need, this option references the Dial Rules option on the left tool bar.

There are also several advanced extension options available. The advanced options establish the connections from the listed extension to other systems within the IPPBX system server. These advanced options include the following:

- **Voicemail** The extension support voicemail
- **SIP** The extension support SIP protocol
- **IAX** The extension support IAX protocol
- **Call Waiting** The extension support Call Waiting function
- **3-Way Calling** The extension support 3-Way Calling functions



- [Pickup Group](#) Select pickup group of the extension
- [Delete VMail](#) If this option is set, then voicemails will not be checkable using a Phone. Messages will be sent via e-mail, only. Note: You need to have an smtp server configured for this functionality.
- [Codecs](#) Click here, you can set the extension's codec (default support: alaw, ulaw and G.729).

## 5.2 Trunk

If you want to make external call, you must register with a Trunk in order to connect to the Public Switched Telephone Network (PSTN) or other VoIP service provider. Through the web page you can add a trunk.

There are three Trunk categories: **Analog Trunk, VoIP Providers, Peer.**

### *Analog Trunk*

Select the Analog radio button to define the analog ports you have access to as a service provider. This will give you the ability to place calls through the IP PBX utilizing analog lines. The analog ports available will be displayed when you select this option. Choose one or more analog ports by selecting their associated checkbox. You will not be able to create an analog service provider if you do not have any analog ports available.

### *Custom Trunk*

The Custom VoIP option allows you to create a custom VoIP definition. To create the custom VoIP provider definition you will need to complete the following:

- [Description](#) The description should be used as the name of the custom VoIP definition
- [Protocol](#) Specify either a IAX or SIP protocol
- [DialPlan](#) Select a DialPlan for this trunk.
- [Register](#) Enable/Disable server register. Registering is not required for all providers
- [Host](#) The IP address of your service provider
- [Username](#) The user name associated with your provider account



- **Password** The password associated with your provider account
- **Without Authentication** if you connect to Voip server without Authentication, pls selected this.

### Peer

The Peer option allows you to create a custom VoIP Peer.

Add Trunk X

**Provider Type:**

☐ Analog Trunk

☐ E1 Trunk

☐ VoIP Trunk

☒ Peer

Peer Name:

Protocol:

DialPlan:

Host:

NAT: ☒

☐ Without Authentication

Username:

Password:

- **Peer Name** Defines a peer name for this peer.
- **Protocol** Specify either a IAX or SIP protocol
- **DialPlan** Select a DialPlan for this peer
- **Host** dynamic | hostname | IP Address
- **NAT** Disable/Enable the NAT function
- **Without Authentication** if you connect to the PBX without Authentication, pls selected
- **Username** Defines the peer username
- **Password** Defines the peer password

Once you have added a VoIP Trunk it will appear on the list of Trunk on the Trunk page. There is an Options drop-down list associated with each Trunk listing. The Options drop-down list allows you to edit or delete the Trunk definition, as well as further refine the definition by choosing several advance options. Select either Codecs or Advanced to further refine the definition.

- **Edit** Edit you select the trunk.
- **Codecs** Codecs provide the ability for your voice to be converted to a digital signal and transmitted across the internet.
- **Advanced** The following advanced options are available to further refine your trunk.

Advanced Settings

trunkname:	<input type="text" value="trunk_1"/>
insecure:	<input type="text" value="very"/>
port:	<input type="text" value="5060"/>
caller ID:	<input type="text"/>
fromdomain:	<input type="text" value="192.168.1.100"/>
fromuser:	<input type="text" value="test"/>
contact:	<input type="text"/>
qualify:	<input type="text" value="yes"/>

- **Trunkname** Specify a trunk name if you want to refer to the service provider definition as something other than specified in Comment
- **Insecure** This option specifies how connects to a service provider (host)




should be handled. Valid options are very/yes/no/invite/port. (Default is “very” )

- **Port** The register request is sent through the port. (Default is SIP:5060,IAX:4569)
- **Caller ID** The caller ID will be set to the value specified in this field
- **Fromdomain** Sets default from: domain in SIP messages when acting as a SIP client.
- **Fromuser** Sets default from: user in SIP messages when acting as a SIP client
- **Contact** Specifies a primary extension for call routing

### 5.3 Outbound Routers

The Dial Rules tab on the left toolbar allows you to use basic pattern matching to differentiate outbound calls and route them accordingly (create different DialPlan).

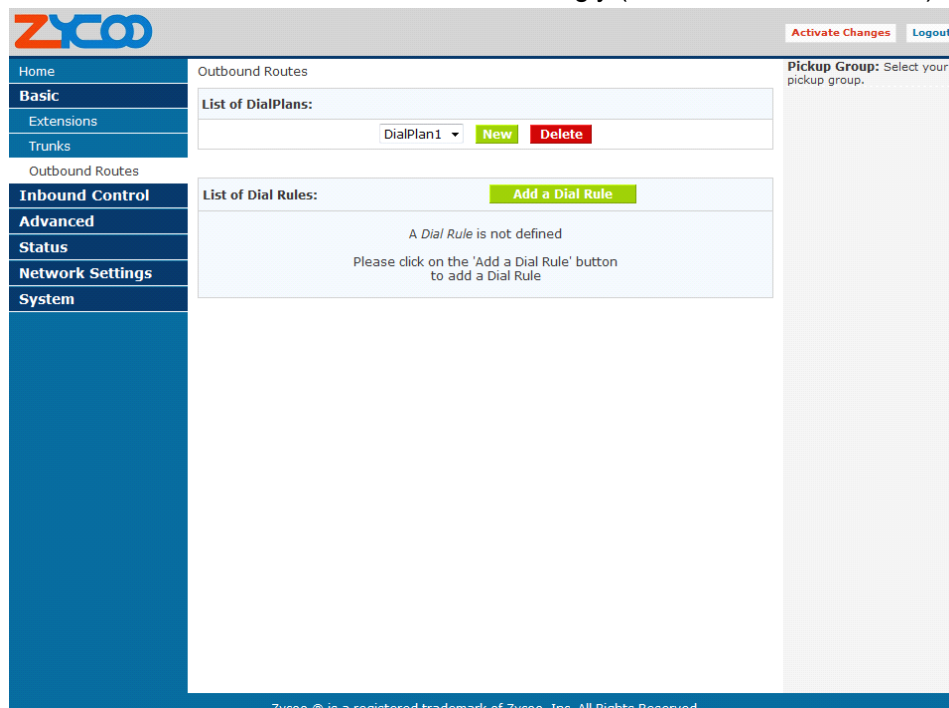

Click on Add a Dial Rule to define a new DialPlan. The following dialog will be displayed.



The screenshot shows the ZYCOO web interface for the ZX100 Series IP PBX. On the left is a navigation menu with options: Home, Basic, Extensions, Trunks, Outbound Routes, Inbound Control, Advanced, Status, Network Settings, and System. The main area is titled 'Outbound Routes' and contains a 'List of DialPlans' section with a dropdown menu set to 'DialPlan1' and buttons for 'New' and 'Delete'. Below this is a 'List of Dial Rules' section with an 'Add a Dial Rule' button. A modal dialog box is open for adding a new rule. It has the following fields: 'Rule Name' (set to 'Call\_PSTN'), 'Place this call through' (set to 'Ports 1,2,3,4'), 'Failover' (set to 'None'), 'PIN Set' (empty), and 'Dialing Rules' (set to 'If the number begins with 9 and followed by (more than) 2 digits (define a custom pattern)'). There are also fields for 'Delete 1 digits from the front and auto-add digit before dialing'. At the bottom of the dialog are 'Save' and 'Cancel' buttons. On the right side of the interface, there is a 'Dialing Rules' section with an example: 'Ex: If the number begins with '256' and followed by 7 digits or more'. At the bottom of the page, there is a small copyright notice: 'Zycoo® is a registered trademark of Zycoo, Inc. All Rights Reserved.'

A DialPlan is comprised of the following items:

- **Rule Name** Set a rule name
- **Place this call through** Select a Trunk through which the call should be made
- **Failover** Select a trunk Failover
- **PIN Set** Set a password when you dial base the Dial rule.
- **Dialing Rules** The Dialing Rule gives you the ability to use basic pattern matching to differentiate calls and route them accordingly. For instance, if a number begins with 9256 followed by 7 or more digits, that would define a call within the state of Alabama. If a call began with 9 followed by 7 digits, it would be a local call that probably didn't require a long distance charge. Instead of adding a rule for every extension or phone number you call, specify the pattern in this rule similar to the example.
- **Define a custom pattern** Set a custom pattern by yourself.

Custom Pattern:   
 (define a Basic Pattern)  
**Z** Any digit from 1 to 9  
**N** Any digit from 2 to 9  
**X** Any digit from 0 to 9  
**.** Any number of additional digits

**N** Any digit from 2 to 9  
**Z** Any digit from 1 to 9  
**X** Any digit from 0 to 9  
**.** Any number of additional digits


Example: "\_9ZNXXX." mean first number is 9, second number is any digit from 1 to 9, third number is any digit from 2 to 9 and each "X" is any digit from 0 to 9. The "." is more.

- **Delete** This option gives you the opportunity to remove specified digits from the call being dialed and replace them with the digits needed to make the call. You can also prepend digits to the beginning.



## Chapter6 Inbound Control

### 6.1 Inbound Routers

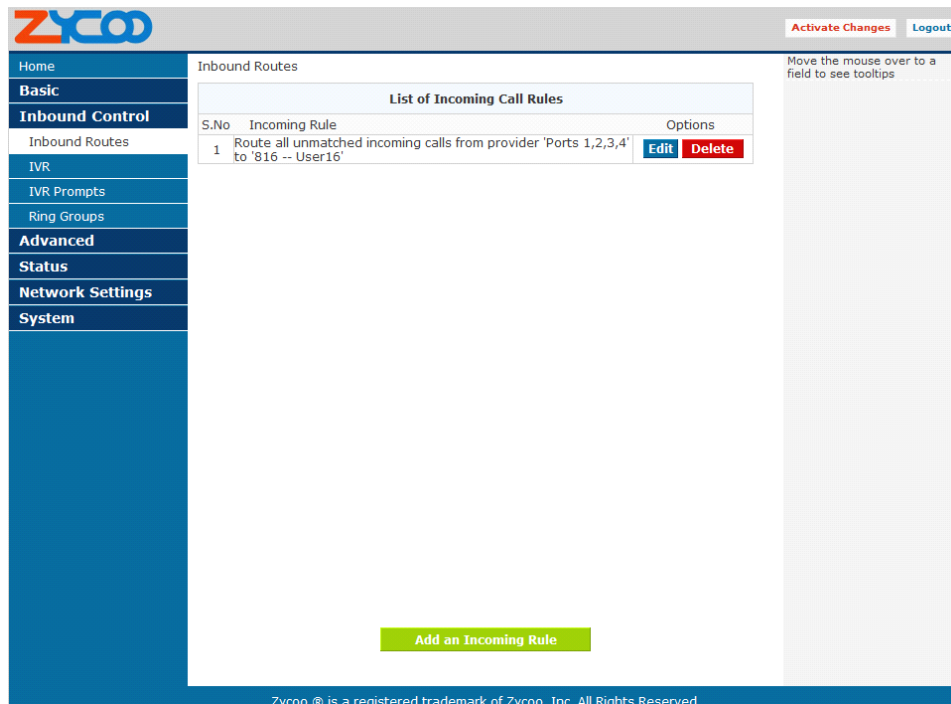

The same pattern-matching logic used for processing outbound calls can also be employed for inbound calls. The two defaults define routing based on whether an incoming call matches or doesn't match a pattern you define.

There are only a few options you need to configure

- **Route** Make a selection from the drop-down list to choose how the calls will be routed. You can select from All Unmatched Calls or Calls which Match
- **From Provider** Select from the list of providers which you previously configuration
- **To Extension** The previously configuration extension which should receive the Call.

### 6.2 IVR (Interactive Voice Response)

Through the web page, you can create Interactive Voice Response (IVR). IVR are designed to allow for more efficient routing of calls from incoming callers.



Voice menus are constructed depending on your needs. Just like your business you need to create the solution best suited to your customers.

- **Name** Set a IVR name
- **Extension** Set a IVR connect number
- **Welcome Message** Select a welcome message voice from record
- **Dial other Extensions** Enable/Disable allow dial other extensions.

### 6.3 IVR Prompts

In the event that one wants to record custom IVR prompts for the IP PBX, which can be used in a IVR, the Record may be used.


A list of previously recorded menus is displayed. Here, the user may modify several



options

- **Record Again** Clicking this button allows the user to make another attempt at recording and replacing an existing custom sound file
- **Play** Clicking this button brings up a dialog entry box to allow the input of an extension that System will dial and play the prompt over
- **Delete** Clicking this button will delete the selected prompt

There are two options under “Record a new voice”

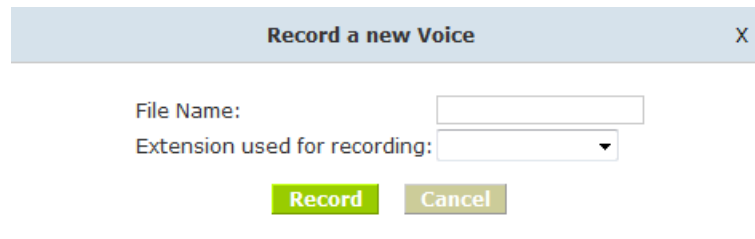


A dialog box titled "Record a new Voice" with a close button (X) in the top right corner. It contains two input fields: "File Name:" followed by a text entry box, and "Extension used for recording:" followed by a drop-down select box. Below these fields are two buttons: "Record" (green) and "Cancel" (grey).

- **File Name** This text entry box specifies the saved name of the file that is to be recorded.
- **Extension Used for Recording** This drop-down select box allows the user to choose which extension will dial to wait for the user to speak the prompt

## 6.4 Ring Groups

A ring group is a group of users assigned to answer incoming call to a single extension. When a caller dials a ring group extension, all of the phones of the users in the ring group will ring together, the call is answered when any one of the users in the group pick up the call. You can configure Ring Groups through the web page

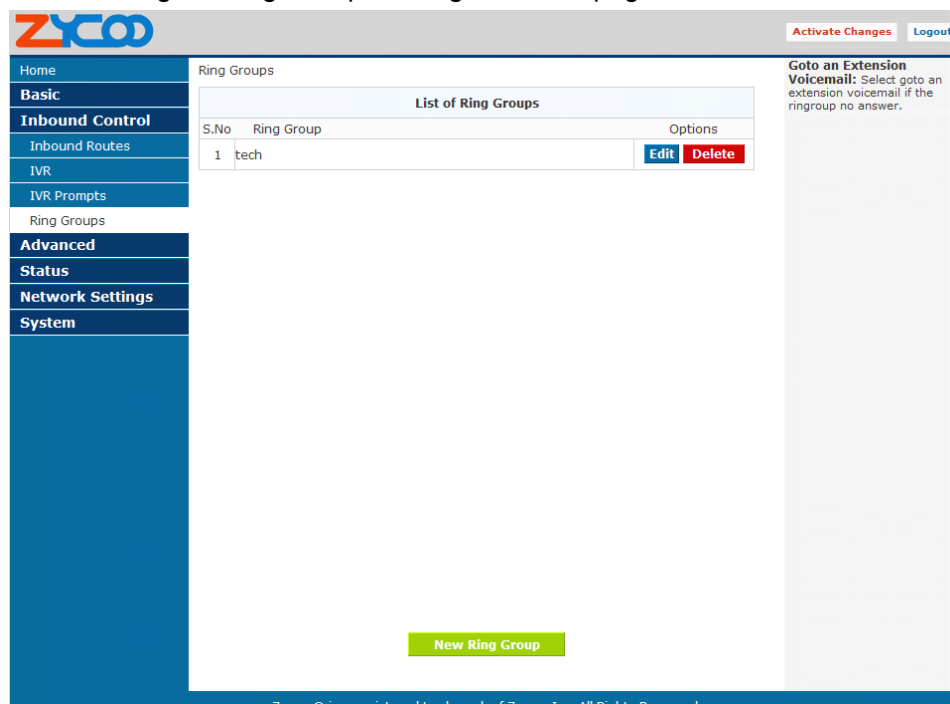

The screenshot shows the ZYCOO web interface for configuring Ring Groups. On the left is a navigation menu with options: Home, Basic, Inbound Control, Inbound Routes, IVR, IVR Prompts, Ring Groups (selected), Advanced, Status, Network Settings, and System. The main content area is titled "Ring Groups" and contains a "List of Ring Groups" table. The table has columns for S.No, Ring Group, and Options. It lists one entry: S.No 1, Ring Group tech, with Edit and Delete buttons. Below the table is a green "New Ring Group" button. On the right side, there are links for "Activate Changes" and "Logout", and a section titled "Goto an Extension Voicemail" with instructions. At the bottom, a footer note states: "Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved."

Define Ring Groups to Dial more than one extension



**Add Ring Group**
X

Name: 
Strategy: Ring all

←

→

»»

SIP/801 -- User1  
SIP/605 -- User2  
SIP/803 -- User3  
SIP/804 -- User4  
SIP/805 -- User5  
SIP/806 -- User6  
SIP/807 -- User7  
SIP/808 -- User8

**Ring Group Members**

Extension for this ring group(Optional) :

Ring (each/all) for these many seconds :

If not answered

☐ Goto an Extension

☐ Goto an Extension Voicemail

☐ Goto a RingGroup

☐ Goto an IVR menu

☒ HangUp

**Available Channels**

Save
Cancel

- **Name** Set a Ring Group name
  - **Strategy** There is a drop-down list, you can choose Ring all or Ring in order.
  - **Ring Group Members** Add Ring Group member from Available channels.
- If the Ring Group no answered you can choose to [Goto an Extension](#), [Goto an Extension Voicemail](#), [Goto a RingGroup](#), [Goto an IVR menu](#), [HangUp](#).



## Chapter7 Advanced Configuration

### 7.1 Options

- **Local Extensions are** Set up the digit of local extensions
- **Operator Extension** Set up Operator Extension. (you can dial “0” go to the extension at any time)
- **Global Ring Time Set** Set default each extension ring time.
- **Music On Ringback** Enable/Disable the Music On Ringback function
- **Default Settings for a New User** Set up the Default Settings for a New User, when You create a new extension will use the configuration.

### 7.2 Voice Mail

The ZX100 provides Voice mail for its end users as an optional feature. End users can retrieve their voice mails and change their password. The relationship between the extension and the voice mail is established in the User Extension section of the GUI. You can configure the voicemail through this page.



## 7.2.1 General Settings

The screenshot displays the Zycoo Voicemail Configuration web interface. On the left is a sidebar menu with categories: Home, Basic, Inbound Control, Advanced, and System. The 'Advanced' category is selected, showing sub-options like Voicemail, Conferencing, Music on hold, Music on Ringback, Call Parking, DISA, Follow Me, Paging and Intercom, Monitor, Time Based Rules, Status, Network Settings, and System. The main content area is titled 'Voicemail Configuration' and has three tabs: General, SMTP Settings, and Email Settings. The 'General' tab is active, showing the 'VoiceMail Reference' section with fields for 'Extension for checking messages' (600), 'Max greeting (seconds)' (60), 'Direct to Voicemail' (checkbox), and 'Dial '0' for Operator' (checkbox). Below this is the 'Voice Message Options' section with dropdowns for 'Message Format' (WAV (16-bit)), 'Maximum messages : (per folder)' (100), 'Max message time' (5 minutes), and 'Min message time' (No minimum). The 'Playback Options' section at the bottom has checkboxes for 'Say message Caller-ID' (checked), 'Say message duration', 'Play envelope', and 'Allow users to review'. 'Save' and 'Cancel' buttons are at the bottom right of the form. In the top right corner of the interface are 'Activate Changes' and 'Logout' buttons. A footer note at the bottom states 'Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.'

Standard configuration information is also present, allowing you to confirm the extension used to check messages as well as general parameters such as the following:

- **Extension for Checking Messages** This option defines the extension which Users call in order to access their voicemail account.
- **Max greeting(Seconds)** With this option, you specify the maximum amount of time available to record your voicemail greeting.
- **Attach recordings to e-mail** Enable/Disable send recording file to you email by attachment
- **Dial “0” for Operator** Callers who are sent to voice mail can press “0” for the operator and be transferred either during the voice mail salutation, or after recording the message. If this option is not enabled, a caller’s pressing “0” will be ignored.

There are several options that can be specified to define the voicemail message in the system.

- **Message Format** This option gives you the ability to choose the format in which messages will be mailed.
- **Maximum Messages** The maximum number of messages per voice mail box is set here.
- **Maximum Message Time** The maximum duration of a message left by a caller is set here
- **Minimum Message Time** The minimum duration of a message is dictated here.

There are several playback options that can be specified.

- **Say Message Caller-ID** The Say Message Caller ID option reads the caller ID before the voice mail message is played



- **Say Message Duration** This option identifies exactly how long the message lasted.
- **Play Envelop** The envelope provides the date, time, and caller ID related to a voice mail.
- **Allow Users to Review** This option provides incoming callers the option to review their message before it is saved and can be played back by the owner of the voice mail extension. Standard options are presented to you, allowing you to discard the message or re-record it if you aren't happy with it.

### 7.2.2 SMTP settings

The screenshot shows the Zycoo Voicemail Configuration web interface. On the left is a navigation menu with options: Home, Basic, Inbound Control, Advanced, Options, Voicemail, Conferencing, Music on hold, Music on Ringback, Call Parking, DISA, Follow Me, Paging and Intercom, Monitor, Time Based Rules, Status, Network Settings, and System. The main content area is titled 'Voicemail Configuration' and has three tabs: General, SMTP Settings (selected), and Email Settings. The SMTP Settings tab contains the following fields: 'Smtp server' (text input), 'Port' (text input with '25' entered), 'SSL/TSL' (checkbox, unchecked), 'Enable ssmtp Authentication' (checkbox, checked), 'Username' (text input), and 'Password' (text input). At the bottom of the form are 'Save' and 'Cancel' buttons. On the right side of the interface, there are 'Activate Changes' and 'Logout' buttons. A tooltip提示 'Move the mouse over to a field to see tooltips' is visible on the right. The footer of the page states 'Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.'

- **Smtp server** The IP address or hostname of an SMTP server that your IP PBX may connect to, in order to send e-mail notifications of your voicemail; eg:mail.yourcompany.com
- **Port** The port number on which the SMTP server is running; generally port 25.
- **SSL/TSL** Enable use SSL/TLS to send secure messages to server.
- **Enable SMTP Authentication** if your SSMTP server needs Authentication, please enable SSMTP Authentication set, and configure the follow information
- **Username** input username of your email.
- **Password** input password of your email.



### 7.2.3 Email settings

**Zycoo** Activate Changes Logout

Home **Basic** Inbound Control **Advanced** Options Voicemail Conferencing Music on hold Music on Ringback Call Parking DISA Follow Me Paging and Intercom Monitor Time Based Rules **Status** Network Settings **System**

Voicemail Configuration

General SMTP Settings **Email Settings**

Template for Voicemail Emails

☒ Attach recordings to e-mail

Sender Name IPPBX Server

From gang.chen@zycoo.com

Subject you've a voicemail from \${VM\_CALLERID}

Message Dear \${VM\_NAME}, you have a new voicemail from \${VM\_CALLERID}, the message time is \${VM\_DUR}. Receive voicemail time is \${VM\_DATE}.

Save Cancel

Template Variables:

- %t : TAB
- \${VM\_NAME} : Recipient's firstname and lastname
- \${VM\_DUR} : The duration of the voicemail message
- \${VM\_MAILBOX} : The recipient's extension
- \${VM\_CALLERID} : The caller id of the person who left the message
- \${VM\_MSGNUM} : The message number in your mailbox
- \${VM\_DATE} : The date and time the message was left

Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.

- **Sender Name** Set the name for sender
- **From** Set the from email
- **Subject** Set the email title
- **Message** Input the matter in your email.

## 7.3 Conferencing

Every company reaches the point of needing more people on a call than it can effectively include through three-way calling. conference bridges allow you to include more people as well as project a professional image.

**Zycoo** Activate Changes Logout

Home **Basic** Inbound Control **Advanced** Options Voicemail Conferencing Music on hold Music on Ringback Call Parking DISA Follow Me Paging and Intercom Monitor Time Based Rules **Status** Network Settings **System**

Conference Room Configuration

Conference Number

Room Extension: 900

Conference Password

PIN Code: 1234

Admin PIN Code: 2345

Conference Options

☒ Play hold music for first caller

☐ Enable caller menu

☒ Announce callers

☐ Record conference

☐ Quiet Mode

Save Cancel

Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.

The configuration of the conference room and standard features is very straightforward.



The conference room use default extension 900 , but you can always change it to any extension number you want. After establishing the extension for the room, you need to specify the password settings for the conference. Assign the PIN Code used by participants to enter the conference as well as the Administrator PIN Code used by the moderator of the conference to open the conference room.

## 7.4 Music On Hold

- [List of Music On Hold](#)      Display Music On Hold class list
- [Class](#)      Set Music On Hold class name
- [Music](#)      Select music. (you can replace music file through the update page.)
- [Enter The Music File Name](#)      Set you want upgrade music file name
- [TFTP Server IP address](#)      Set the TFTP server IP
- [Select Music directory](#)      Select directory that you want saved music file.



## 7.5 Music On Ringback

ZYCOO

Activate Changes Logout

Home Basic Inbound Control Advanced Options Voicemail Conferencing Music on hold Music on Ringback Call Parking DISA Follow Me Paging and Intercom Monitor Time Based Rules Status Network Settings System

Music On Ringback

Music On Ringback Reference

Music: music2

Save Cancel WOR Reload

Move the mouse over to a field to see tooltips

Zycoo® is a registered trademark of Zycoo, Inc. All Rights Reserved.

- **Music** Select a music for Music On Ringback

**Notice:** You must enable Music On Ringback function.(In Options Page)

## 7.6 Call Parking

ZYCOO

Activate Changes Logout

Home Basic Inbound Control Advanced Options Voicemail Conferencing Music on hold Music on Ringback Call Parking DISA Follow Me Paging and Intercom Monitor Time Based Rules Status Network Settings System

Call Parking Preferences

Call Parking Reference

Extension to Dial for Parking Calls: 700

What extensions to park calls on: 701-720 (Ex: '701-720')

Number of seconds a call can be parked for: 45

Pickup Extension: \*8

Pickup Specified Extension: \*7

Blind Transfer: #

Attended Transfer: \*2

Disconnect Call: \*

Timeout for answer on attended transfer: 15

Save Cancel

Move the mouse over to a field to see tooltips

Zycoo® is a registered trademark of Zycoo, Inc. All Rights Reserved.


- **Extension to Dial for Parking Calls:** Set Call Parking number
- **What extensions to park call on:** Set the Call Parking get number (eg:701-720)
- **Number of seconds a call can be parked for:** Set the second call time
- **Pickup Extension:** Set Pickup Extension
- **Pickup Specified Extension** Set Pickup Specified Extension
- **Blind Transfer** allows unattended or blind transfers. It works like this:



While on a conversation with another party, you dial the blindxfer sequence. the system says "Transfer" then gives you a dial tone, while putting the other party on hold. You dial the transferee number and the caller is put through to that number immediately. Your line drops. The caller ID displayed to the person receiving the transferred call is exactly the same as the caller ID presented to you.

- **Attended Transfer** allows attended transfer or supervised transfer. It works like this: While on conversation with another party, you dial the atxfer key sequence. the system says "Transfer" then gives you a dial tone, while putting the other party on hold. You dial the transferee number and talk with the transferee to introduce the call, then you can hang up and the other party will be connected with the transferee. In case the transferee does not want to answer the call, he/she simply hangs up and you will be back to your original conversation. Press the disconnect key sequence, set to \* by default, to return yourself to the original caller.
- **Disconnect Call** Disconnect the current transfer call(for Attended transfer).
- **Timeout for answer on attended transfer:** Set the answer timeout value.

## 7.7 DISA Settings

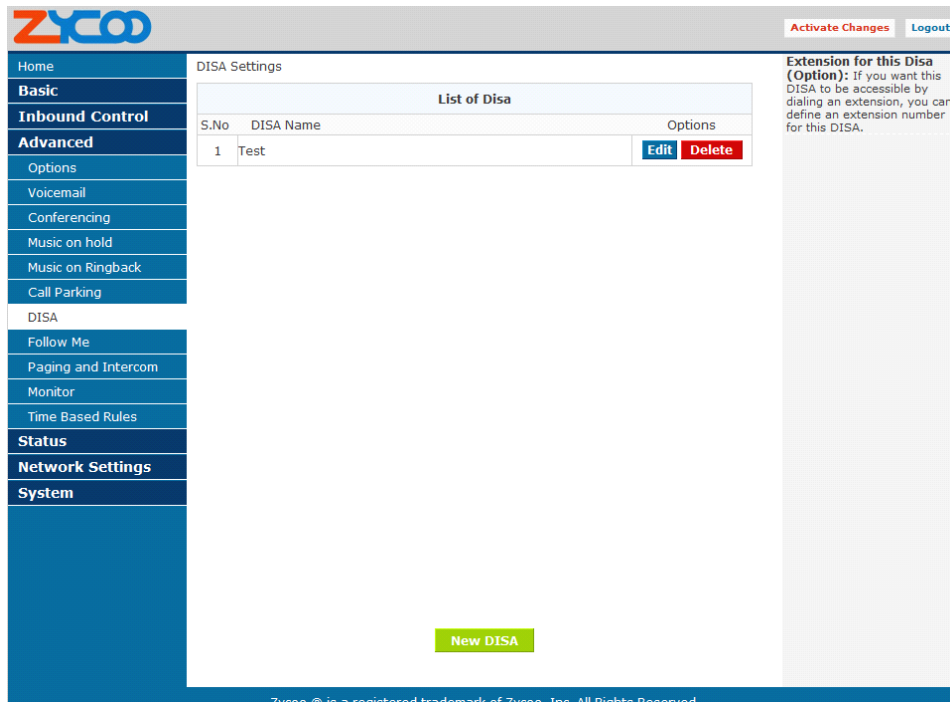

The screenshot displays the ZYCOO web interface for DISA Settings. On the left is a navigation menu with categories: Home, Basic, Inbound Control, Advanced, and System. The 'Advanced' section is expanded, showing options like Options, Voicemail, Conferencing, Music on hold, Music on Ringback, Call Parking, DISA, Follow Me, Paging and Intercom, Monitor, Time Based Rules, Status, Network Settings, and System. The main area, titled 'DISA Settings', features a 'List of Disa' table with the following data:

S.No	DISA Name	Options
1	Test	<a href="#">Edit</a> <a href="#">Delete</a>

Below the table is a green 'New DISA' button. To the right of the table, a note states: 'Extension for this Disa (Option): If you want this DISA to be accessible by dialing an extension, you can define an extension number for this DISA.' At the top right of the interface are 'Activate Changes' and 'Logout' buttons. The footer contains the text: 'Zycoo © is a registered trademark of Zycoo, Inc. All Rights Reserved.'

- **List of DISA** DISA name are listed in the table.
- **New DISA** Create a new DISA.



**Add a Disa**
X

DISA Name:

PIN:  Without PIN ☐

Response Timeout(s):

Digit Timeout(s):

Extension for this Disa(Optional):

**Allow Outbound Route**

Select DialPlan DialPlan1

Save
Cancel

- **DISA Name**                      Set a name for DISA
- **PIN**                              Set a password for DISA
- **Response Timeout(s)**        Set effective time for inputting a password
- **Digit Timeout(s)**            After you input the right password, the interval between digits that you need dial.

**Extension for this DISA(Optional)**      Set a number connect DISA

**Select DialPlan**                              Select your DialPlan for calling out

## 7.8 Follow Me

Activate Changes
Logout

[Home](#)  
[Basic](#)  
[Inbound Control](#)  
[Advanced](#)  
[Options](#)  
[Voicemail](#)  
[Conferencing](#)  
[Music on hold](#)  
[Music on Ringback](#)  
[Call Parking](#)  
[DISA](#)  
[Follow Me](#)  
[Paging and Intercom](#)  
[Monitor](#)  
[Time Based Rules](#)  
[Status](#)  
[Network Settings](#)  
[System](#)

Follow Me
Move the mouse over to a field to see tooltips

List of Follow Me				
S.No	Extensions	State	Forward No.	Options
1	810	BN	820	<a href="#">Edit</a> <a href="#">Delete</a>

New Follow Me

- **List of Follow Me**              Call Forward extensions are listed in the table.
- **New Follow Me**                Create a new Call Forward



Add a Follow Me X

Extension:   
 Ring lasting for  seconds  
 Status: ☐ Always ☐ Busy ☐ No answer  
**Set your call forward number**  
☒ Forward a Local Extension: ☐ Forward a Outside Number:  
 Select forward extension

- **Extension** Select a need to call forward extension
- **Ring Time** Set the extension ring time
- **State** Set state of the extension.(Disable, Always, Busy, No answer)
- **Select forward extension** Select a call forward to extension

When you select "Forward an Outside Number" the follow page will be displayed.

Add a Follow Me X

Extension:   
 Ring lasting for  seconds  
 Status: ☐ Always ☐ Busy ☐ No answer  
**Set your call forward number**  
☐ Forward a Local Extension: ☒ Forward a Outside Number:  
 Select DialPlan   
 Set forward outside number

- **Select DialPlan** Select a Call forward to outside number using dialingrules
- **Set forward outside number** Input a Call forward to outside number. (Notice: This number must be consistent with the corresponding DialPlan)

## 7.9 Paging and Intercom

[Activate Changes](#)
[Logout](#)

[Home](#)  
[Basic](#)  
[Inbound Control](#)  
[Advanced](#)  
[Options](#)  
[Voicemail](#)  
[Conferencing](#)  
[Music on hold](#)  
[Music on Ringback](#)  
[Call Parking](#)  
[DISA](#)  
[Follow Me](#)  
[Paging and Intercom](#)  
[Monitor](#)  
[Time Based Rules](#)  
[Status](#)  
[Network Settings](#)  
[System](#)

Paging and Intercom
List of Paging Groups

S.No	Paging Group	Options
1	5000 test	<input type="button" value="Edit"/> <input type="button" value="Delete"/>

**Duplex:** Paging is typically one way for announcements only. Checking this will make the paging duplex, allowing all phones in the paging group to be able to talk and be heard by all. This makes it like an "instant conference".

Zycop © is a registered trademark of Zycop, Inc. All Rights Reserved.



- [List of Paging Groups](#) Paging Groups are listed in the table.
- [Add Paging Group](#) Create a new Paging Group

**Add Paging Group** X

Paging Extension:

Group Description:

**Paging Group Members**

Duplex: ☐

**Device List**

SIP/801 -- User1  
SIP/605 -- User2  
SIP/803 -- User3  
SIP/804 -- User4  
SIP/805 -- User5  
SIP/806 -- User6  
SIP/807 -- User7  
SIP/808 -- User8

**Save** **Cancel**

- [Paging Extension](#) Set a extension for the Paging Group.
- [Group Description](#) Provide a descriptive title for this Page Group.
- [Paging Group Members](#) Selected Device(s) in this Page.
- [Device List](#) Select Device(s) to Page.
- [Duplex](#) Paging is typically one way for announcements only. Checking this will make the paging duplex, allowing all phones in the paging group to be able to talk and be heard by all. This makes it like an "instant conference".

## 7.10 Monitor

**ZYCOO** Activate Changes Logout

Home Basic Inbound Control Advanced Options Voicemail Conferencing Music on hold Music on Ringback Call Parking DISA Follow Me Paging and Intercom **Monitor** Time Based Rules Status Network Settings System

Monitoring

**List of Monitoring Extension**

S.No	Extension	Record Time	Inbound	Outbound	Options
1	821	Always	Disable	Enable	<a href="#">Edit</a> <a href="#">Delete</a>
2	810	09:00-17:30 mon-fri	Enable	Enable	<a href="#">Edit</a> <a href="#">Delete</a>

**New Monitor**

Zycoo.® is a registered trademark of Zycoo, Inc. All Rights Reserved.

- [List of Monitoring Extension](#) Monitoring extensions are listed in the table.
- [Add Monitor](#) Create a new Monitor



X

Extension: 810

**Monitor Time**

Always Monitor: ☐

Start Time: 09 : 00 End Time: 17 : 30

Start Day: Mon End Day: Fri

**Monitor Settings**

Inbound Record: ☒ Outbound Record: ☒

Save
Cancel

- Extension** Select a Monitoring extension
- Monitoring Time** Set always Monitor or select a Monitoring time
- Monitoring Settings** Set inbound record and outbound record

## 7.11 Time Based Rules

[Home](#)  
[Basic](#)  
[Inbound Control](#)  
[Advanced](#)  
[Options](#)  
[Voicemail](#)  
[Conferencing](#)  
[Music on hold](#)  
[Music on Ringback](#)  
[Call Parking](#)  
[DISA](#)  
[Follow Me](#)  
[Paging and Intercom](#)  
[Monitor](#)  
[Time Based Rules](#)  
[Status](#)  
[Network Settings](#)  
[System](#)

Activate Changes
Logout

**List of Time Rule**

S.No	RuleName	Options
1	TimeRule	e

X

Rule Name : TimeRule (Ex: July4)

**Time & Date Conditions**

Start Time: 09 : 00 End Time: 17 : 30

Start Day: Mon End Day: Fri

Start Date: 01 End Date: 31

Start Month: January End Month: December

**Destination**

if time matches: VoiceMenu working time

if time did not match: VoiceMenu closed time

Save
Cancel

New Time Rule


Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.

On this page, Define call routing rules based on date and time



## Chapter8 Status Display

### 8.1 Monitor List

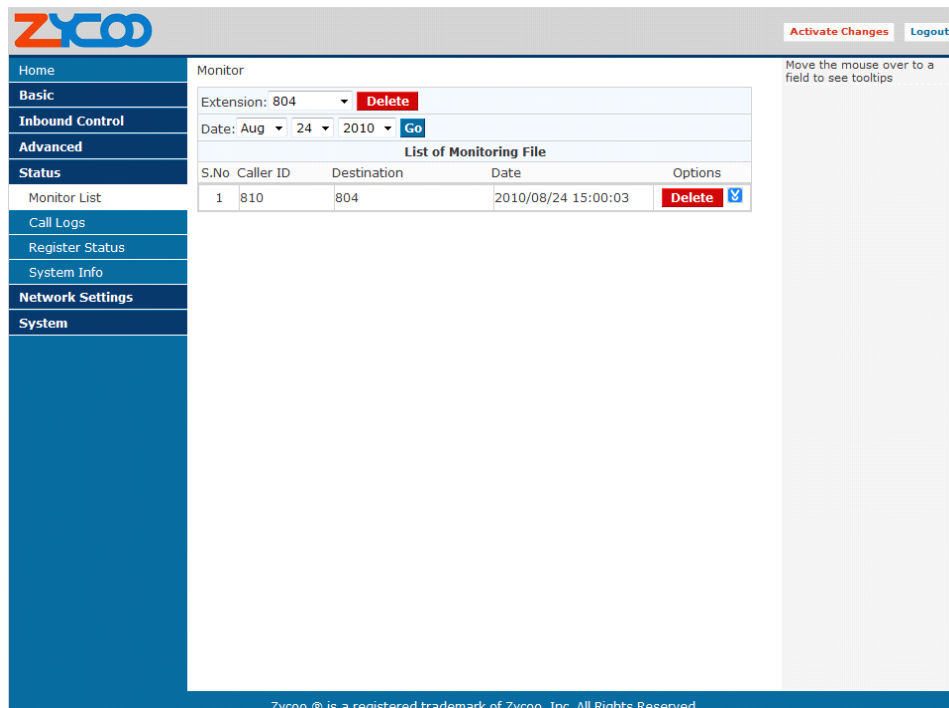

ZYCOO

Activate Changes Logout

Home Basic Inbound Control Advanced Status Monitor List Call Logs Register Status System Info Network Settings System

Monitor

Extension: 804 Delete

Date: Aug 24 2010 Go

List of Monitoring File


S.No	Caller ID	Destination	Date	Options
1	810	804	2010/08/24 15:00:03	Delete V

Move the mouse over to a field to see tooltips

Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.

This web page will display Monitor info for each extension

### 8.2 Call Logs

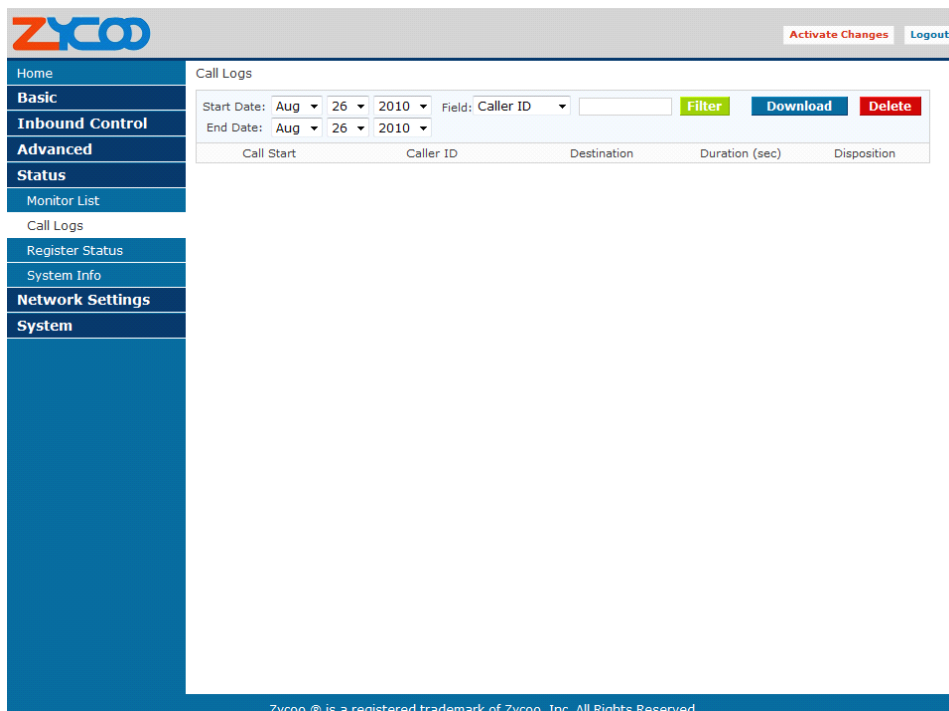

ZYCOO

Activate Changes Logout

Home Basic Inbound Control Advanced Status Monitor List Call Logs Register Status System Info Network Settings System

Call Logs

Start Date: Aug 26 2010 Field: Caller ID Filter Download Delete

End Date: Aug 26 2010

Call Start	Caller ID	Destination	Duration (sec)	Disposition
------------	-----------	-------------	----------------	-------------

Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.


This web page will display call logs

- [Download](#) download the call logs file
- [Delete](#) delete the call logs file



## 8.3 Register Status

In this page, you can check SIP/IAX Users or Trunks Status.

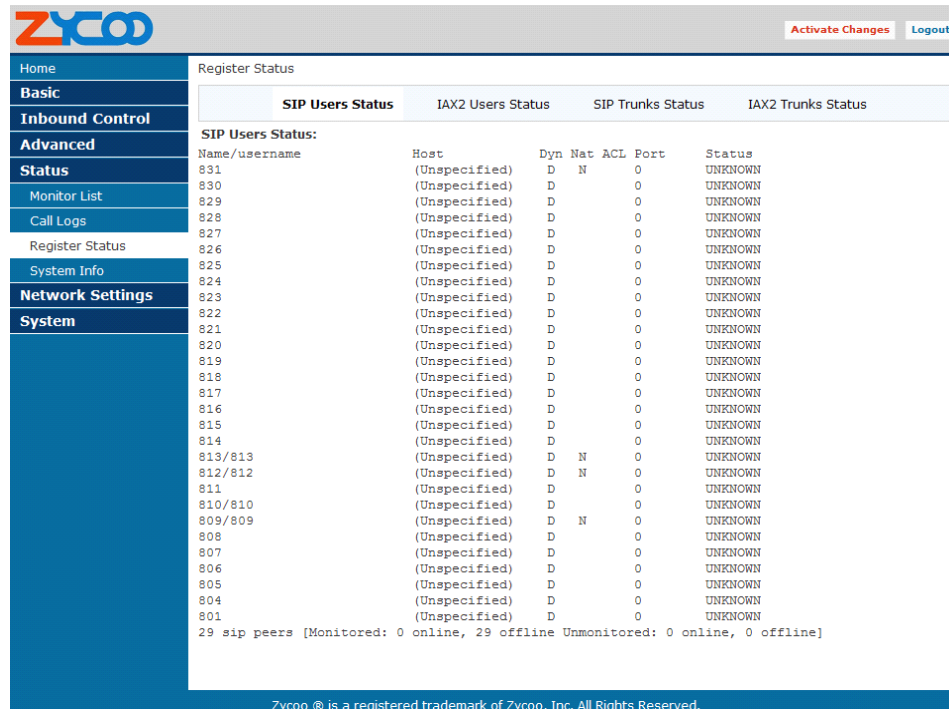

**Register Status**

Activate Changes Logout

Home Basic Inbound Control Advanced Status Monitor List Call Logs Register Status System Info Network Settings System

**SIP Users Status**


Name/username	Host	Dyn	Nat	ACL	Port	Status
831	(Unspecified)	D	N		0	UNKNOWN
830	(Unspecified)	D			0	UNKNOWN
829	(Unspecified)	D			0	UNKNOWN
828	(Unspecified)	D			0	UNKNOWN
827	(Unspecified)	D			0	UNKNOWN
826	(Unspecified)	D			0	UNKNOWN
825	(Unspecified)	D			0	UNKNOWN
824	(Unspecified)	D			0	UNKNOWN
823	(Unspecified)	D			0	UNKNOWN
822	(Unspecified)	D			0	UNKNOWN
821	(Unspecified)	D			0	UNKNOWN
820	(Unspecified)	D			0	UNKNOWN
819	(Unspecified)	D			0	UNKNOWN
818	(Unspecified)	D			0	UNKNOWN
817	(Unspecified)	D			0	UNKNOWN
816	(Unspecified)	D			0	UNKNOWN
815	(Unspecified)	D			0	UNKNOWN
814	(Unspecified)	D			0	UNKNOWN
813/813	(Unspecified)	D	N		0	UNKNOWN
812/812	(Unspecified)	D	N		0	UNKNOWN
811	(Unspecified)	D			0	UNKNOWN
810/810	(Unspecified)	D			0	UNKNOWN
809/809	(Unspecified)	D	N		0	UNKNOWN
808	(Unspecified)	D			0	UNKNOWN
807	(Unspecified)	D			0	UNKNOWN
806	(Unspecified)	D			0	UNKNOWN
805	(Unspecified)	D			0	UNKNOWN
804	(Unspecified)	D			0	UNKNOWN
801	(Unspecified)	D			0	UNKNOWN

29 sip peers [Monitored: 0 online, 29 offline Unmonitored: 0 online, 0 offline]

Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.

## 8.4 System Info

In this page it will display nonce system info

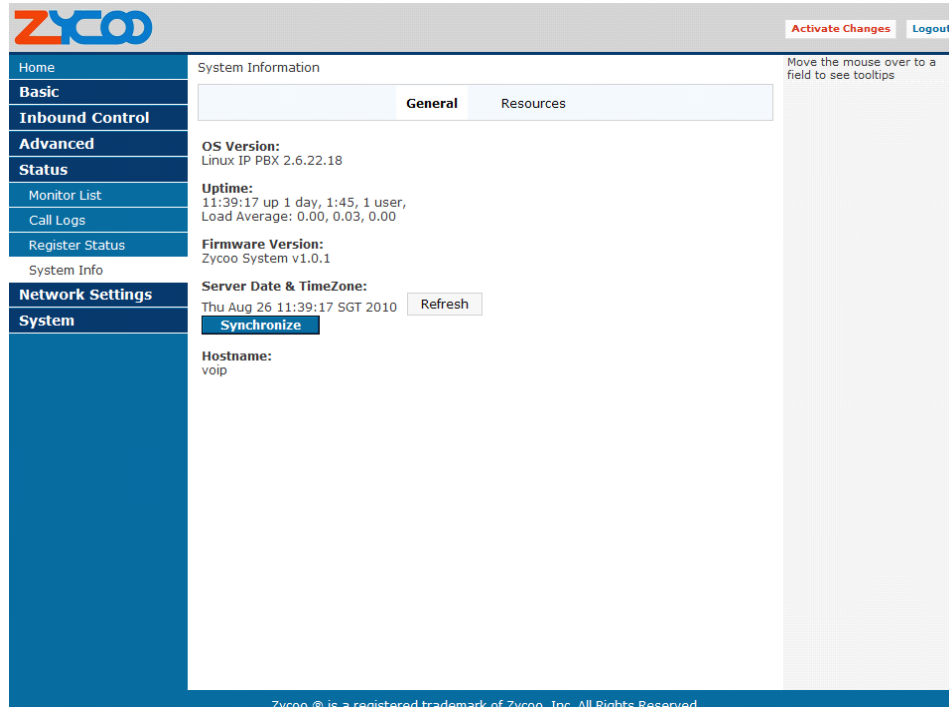

**System Information**

Activate Changes Logout

Home Basic Inbound Control Advanced Status Monitor List Call Logs Register Status System Info Network Settings System

**General** Resources

**OS Version:**  
Linux IP PBX 2.6.22.18

**Uptime:**  
11:39:17 up 1 day, 1:45, 1 user,  
Load Average: 0.00, 0.03, 0.00

**Firmware Version:**  
Zycoo System v1.0.1

**Server Date & TimeZone:**  
Thu Aug 26 11:39:17 SGT 2010 Refresh

**Hostname:**  
voip

Synchronize

Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.



## Chapter9 Network Settings

### 9.1 Network and Country

On this page you can set WAN, LAN interface information and the country of Tone Zone.

#### 9.1.1 WAN Port Settings

The screenshot shows the ZYCOO web interface for Network & Country Settings. The left sidebar contains a menu with options: Home, Basic, Inbound Control, Advanced, Status, Network Settings (selected), Network & Country, Route, NAT Map, IP Filter, DDNS & VPN, and System. The main content area is titled 'Network & Country Settings' and has three tabs: WAN Port Settings (selected), LAN Port Settings, and Country Settings. Under the 'WAN Port Setup' section, there are fields for IP Assign (set to PPPoE), Username (cd85335361), Password (masked with dots), IP Address (221.237.67.62), Subnet mark (255.255.255.255), Gateway (221.237.64.1), and DNS (61.139.2.69). There are 'Connect', 'Save', and 'Cancel' buttons. A 'Save: Save the settings' message is visible on the right. The footer states 'Zycop.® is a registered trademark of Zycop. Inc. All Rights Reserved.'

- **IP Assign:** you can select STATIC, DHCP and PPPoE three mode

#### 9.1.2 LAN Port Settings

The screenshot shows the ZYCOO web interface for Network & Country Settings, specifically the LAN Port Setup section. The left sidebar is the same as in the previous screenshot. The main content area has tabs for WAN Port Settings, LAN Port Settings (selected), and Country Settings. Under the 'LAN Port Setup' section, there are fields for IP address (192.168.10.195) and Subnet mask (255.255.255.0). There are 'Save' and 'Cancel' buttons. A note on the right states: 'IP address: Use this field to set a static IP address on this device's LAN port.' The footer states 'Zycop.® is a registered trademark of Zycop. Inc. All Rights Reserved.'

Set the LAN Port IP Address and Subnet mask.



### 9.1.2 Country Settings

- **Tone Zone:** Set your Country, and use the Country Tone


## 9.2 Route

### 9.2.1 Route Settings

- **Route Enable** Enable/Disable Route function
- **NAT Enable** Enable/Disable NAT Function



## 9.2.2 Static Routing

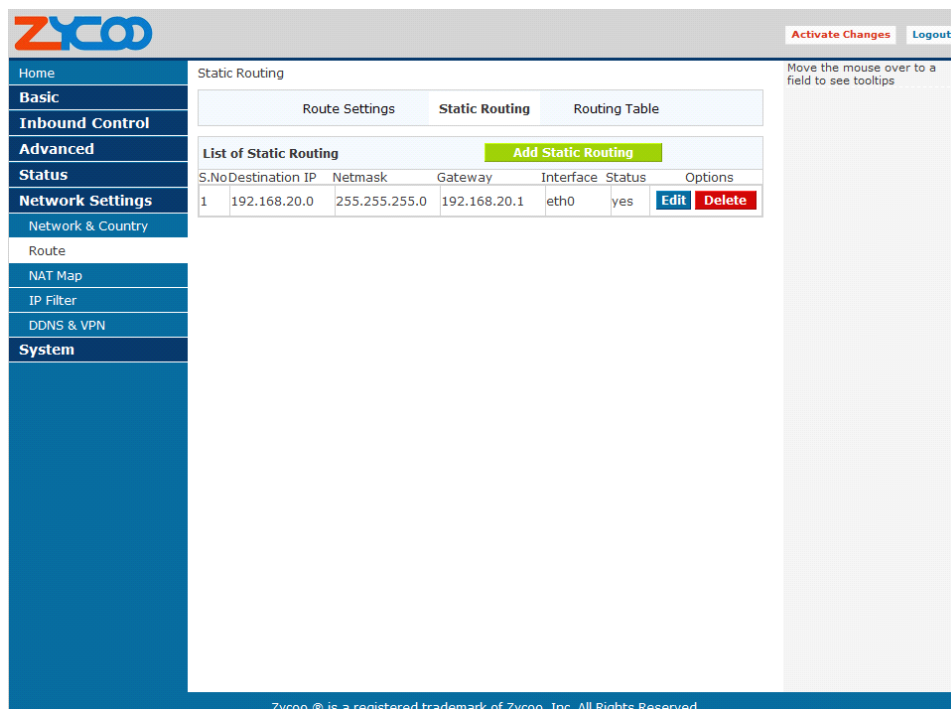

- [List of Static Routing](#) Static Routing are listed in the table.
- [Add Static Routing](#) Create a New Static Routing

**Static Routing Settings**
X

Destination IP:

Netmask:

Gateway:

Interface:

Availability:

- [Destination IP](#) Set Destination IP for the Static Routing
- [Netmask](#) Set Net Mask for the Static Routing
- [Gateway](#) Set Gateway for the Static Routing
- [Interface](#) Set Interface for the Static Routing
- [Availability](#) Set Status for the Static Routing



## 9.2.3 Routing Table

**Routing Table:**  
Kernel IP routing table

Destination	Gateway	Genmask	Flags	Metric	Ref	Use	Iface
192.168.1.0	0.0.0.0	255.255.255.0	U	0	0	0	eth0
192.168.10.0	0.0.0.0	255.255.255.0	U	0	0	0	eth1
169.254.0.0	0.0.0.0	255.255.0.0	U	1002	0	0	eth0
169.254.0.0	0.0.0.0	255.255.0.0	U	1003	0	0	eth1
0.0.0.0	192.168.1.1	0.0.0.0	UG	0	0	0	eth0

Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.

This page will display the current routing table.

## 9.4 NAT Map

**NAT Map**

List of NAT Map Add NAT Map

A NAT Map is not defined  
Please click on the 'Add NAT Map' button to add a NAT Map

Move the mouse over to a field to see tooltips

Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.

- [List of NAT Map](#) NAT Map are listed in the table.
- [Add NAT Map](#) Create a New NAT Map



**NAT Map Settings**
X

Outside Port:  (XX or XX-XX)

Destination IP:

Destination Port:

Protocol:  ▼

Availability:  ▼

Save
Cancel

- [Outside Port](#)                      Set Outside Port for the NAT Map
- [Destination IP](#)                      Set Destination IP for the NAT Map
- [Destination Port](#)                      Set Destination Port for the NAT Map
- [Protocol](#)                      Set Protocol for the NAT Map
- [Availability](#)                      Set Status for the NAT Map

## 9.5 IP Filter

Home
Basic
Inbound Control
Advanced
Status
Network Settings
Network & Country
Route
NAT Map
IP Filter
DDNS & VPN
System

Activate Changes
Logout

IP Filter
Add IP Filter

List of IP Filter

S.No	Source IP	Port	Destination IP	Port	Direction	Protocol	Interface	Action	Status	Options
1	0.0.0.0/0	all	0.0.0.0/0	22	INPUT	tcp	ppp+	ACCEPT	yes	Edit Delete
2	0.0.0.0/0	all	0.0.0.0/0	22	INPUT	tcp	eth0	ACCEPT	yes	Edit Delete
3	0.0.0.0/0	all	0.0.0.0/0	9999	INPUT	tcp	eth0	ACCEPT	yes	Edit Delete
4	0.0.0.0/0	all	0.0.0.0/0	9999	INPUT	tcp	ppp+	ACCEPT	yes	Edit Delete
5	0.0.0.0/0	all	0.0.0.0/0	5060	INPUT	udp	eth0	ACCEPT	yes	Edit Delete
6	0.0.0.0/0	all	0.0.0.0/0	5060	INPUT	udp	ppp+	ACCEPT	yes	Edit Delete
7	0.0.0.0/0	all	0.0.0.0/0	10001:1020	INPUT	udp	eth0	ACCEPT	yes	Edit Delete
8	0.0.0.0/0	all	0.0.0.0/0	10001:1020	INPUT	udp	ppp+	ACCEPT	yes	Edit Delete
9	0.0.0.0/0	all	0.0.0.0/0	all	INPUT	tcp	eth1	ACCEPT	yes	Edit Delete
10	0.0.0.0/0	all	0.0.0.0/0	all	INPUT	udp	eth1	ACCEPT	yes	Edit Delete
11	0.0.0.0/0	all	0.0.0.0/0	all	INPUT	tcp	ppp+	DROP	yes	Edit Delete

- [List of IP Filter](#)                      IP Filters are listed in the table.
- [Add IP Filter](#)                      Create a New IP Filter



X

Source IP:  /

Source Port:

Destination IP:  /

Destination Port:

Interface:

Protocol:

Direction:

Action:

Availability:

Save
Cancel

- [Source IP](#)                      Set Source IP for the IP Filter
- [Source Port](#)                      Set Source Port for the IP Filter
- [Destination IP](#)                      Set Destination IP for the IP Filter
- [Destination Port](#)                      Set Destination Port for the IP Filter
- [Interface](#)                      Select Interface for the IP Filter
- [Protocol](#)                      Select Protocol for the IP Filter
- [Direction](#)                      Select Direction for the IP Filter
- [Action](#)                      Select Action for the IP Filter
- [Availability](#)                      Select Action for the IP Filter

## 9.3 DDNS&VPN

### 9.2.1 DDNS Settings

[Activate Changes](#)
[Logout](#)

[Home](#)  
[Basic](#)  
[Inbound Control](#)  
[Advanced](#)  
[Status](#)  
[Network Settings](#)  
[Network & Country](#)  
[Route](#)  
[NAT Map](#)  
[IP Filter](#)  
[DDNS & VPN](#)  
[System](#)

DDNS
VPN

Dyndns.org DDNS

DDNS Enable: ☐

Username:

Password:

Domain:

Save

Move the mouse over to a field to see tooltips

ZYCOO® is a registered trademark of Zycoo, Inc. All Rights Reserved.

On this page, you can set DDNS reference.

**Notice:** Now, it only supports Dyndns.org server. More other servers, you can customize based on your requirement



### 9.2.2 VPN Settings

The screenshot displays the Zycoo web interface for configuring VPN settings. The left sidebar lists navigation options: Home, Basic, Inbound Control, Advanced, Status, Network Settings, and System. The main content area is titled 'VPN Settings' and includes tabs for 'DDNS' and 'VPN'. The 'VPN' tab is selected, showing the 'N2N VPN' configuration section. This section contains the following fields and controls:

- VPN Enable: ☐
- Server IP:
- Port:
- Local IP:
- Username:
- Password:
- Buttons:

At the bottom of the page, a footer note states: 'Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.'

On this page, you can set VPN reference.

**Notice:** Now, it only supports N2N VPN. More other VPN, you can customize based on your requirement.



## Chapter10 System Management

### 10.1 Time Settings

#### 10.1.1 NTP Settings

- **NTP Server** Specify the NTP server that you wish to use. You may type either the domain name or the IP address of the server, and it may be either remote or local. The default server is pool.ntp.org. Be aware that the PBX needs to be able to access a NTP server in order to function properly.
- **Time Zone** Select your time zone so that the system will set time base on the time zone.

#### 10.1.2 Manual Time Settings

- **Synchronize current PC time** Click the button ,the current PC time synchronization.



## 10.2 Management

The screenshot shows the ZYCOO Management interface. On the left is a navigation menu with options: Home, Basic, Inbound Control, Advanced, Status, Network Settings, System, Time Settings, Management, Backup, and Update. The 'Management' section is active. The main content area has two sections: 'Change Password' and 'Set Language'. The 'Change Password' section has input fields for 'Enter New Password' and 'Retype New Password', followed by an 'Apply' button. The 'Set Language' section has a dropdown menu for 'Set Voice Language' currently set to 'Chinese', followed by a 'Save' button. Below the 'Set Language' section is a link '(Show Advanced Options)'. On the right side of the interface, there are links for 'Activate Changes' and 'Logout'. A footer note at the bottom states: 'Zycop ® is a registered trademark of Zycop, Inc. All Rights Reserved.'

- **Change Password** On this page, you can change the administrator password (Default password: admin)
- **Set Language** Set the system language voice

And you can also set the advanced options about SIP and Zap protocol in the "Show Advanced Options" list, that is useful when you set connect two ippbx in different network.


## 10.3 Backup

The screenshot shows the ZYCOO Backup interface. At the top, a message says 'Backup Successful!'. Below this is a section titled 'Backup / Restore Configurations'. It contains a table titled 'List of Configuration Backups' with columns: S.No, Name, Date, and Options. The table has one row with S.No 1, Name 20100831, Date Aug 31, 2010, and Options containing 'Restore', 'Delete', and a download icon. Below the table is a 'Take a Backup' button. On the right side, there is a note: 'Take a backup: Click this button to make a new backup, that use backup all current configuration.' The left navigation menu is the same as in the previous screenshot. The footer note is also present: 'Zycop ® is a registered trademark of Zycop, Inc. All Rights Reserved.'

On this page, clicking the "Take a Backup" button, you can backup once configuration



## 10.4 Upgrade

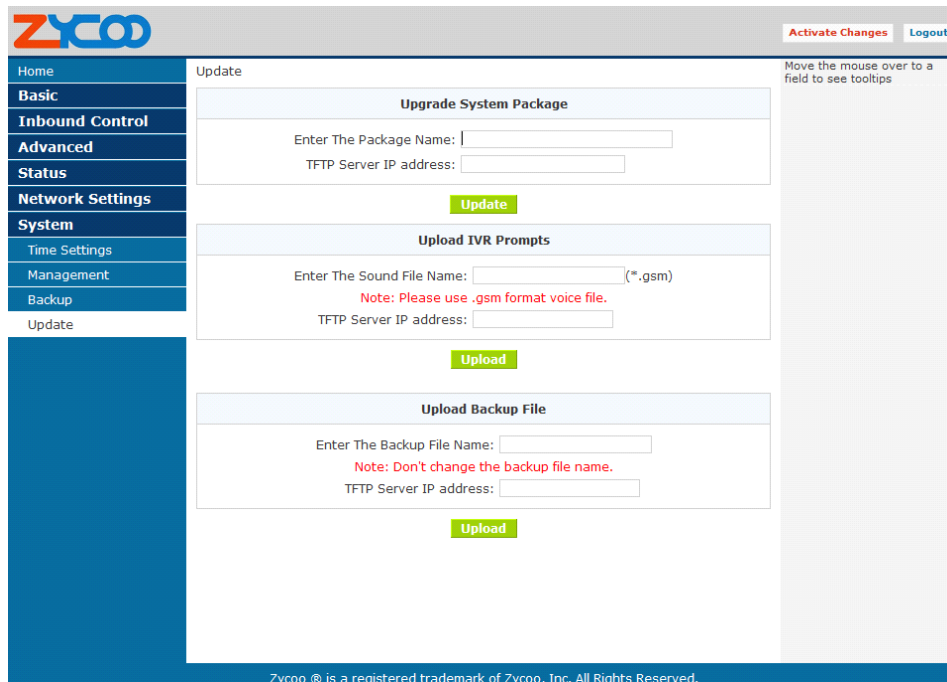


In this page you can upgrade system package

- [Enter The Package Name](#) Set system package name
- [TFTP Server IP address](#) Set TFTP server IP

Unzip the file you download, you will get a TFTP server and an upgrading packet.



Run the TFTP server, you will see below:

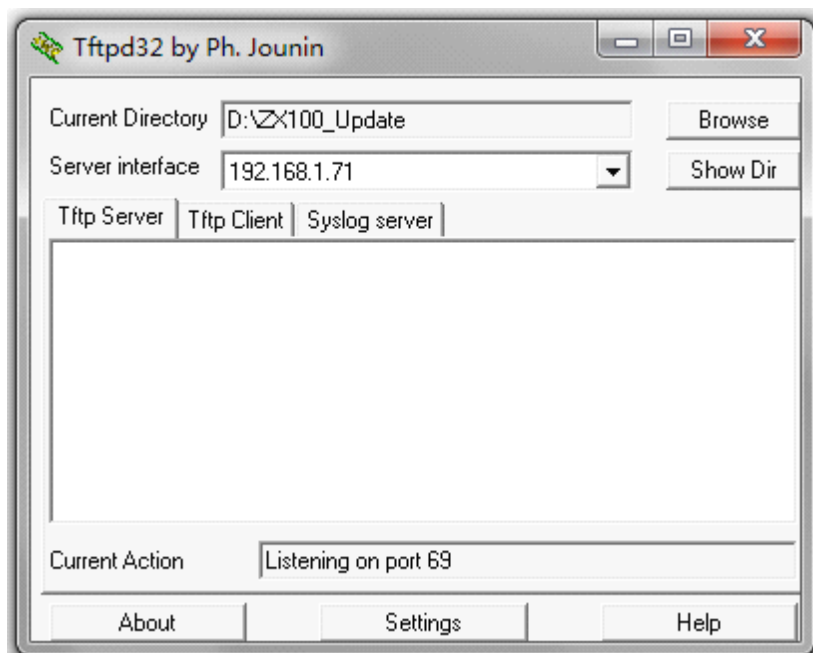

Enter the configuration page, then upgrading page;



Enter The Package Name, hereby it's **ZX100-v1.0**

Enter TFTP Server IP address, hereby it's



192.168.1.71

After done, click **Update** to update, then the system will reboot automatically.

(Note: the upgrading will set your system as default, please make backup before you do it.)




## Chapter11 Operating Instruction

### 11.1 How to link the ZX100 IP PBX to the interwork


#### 10.1.1 IP PBX behind the Router

If your office access the public network with router, you can put the IPPBX behind the router. You should connect the Wan port of the IPPBX to the Lan ports of the router, and you also can connect HUB or Switch to the Lan ports of the IPPBX to let some PC or IP Phone to access the public network..

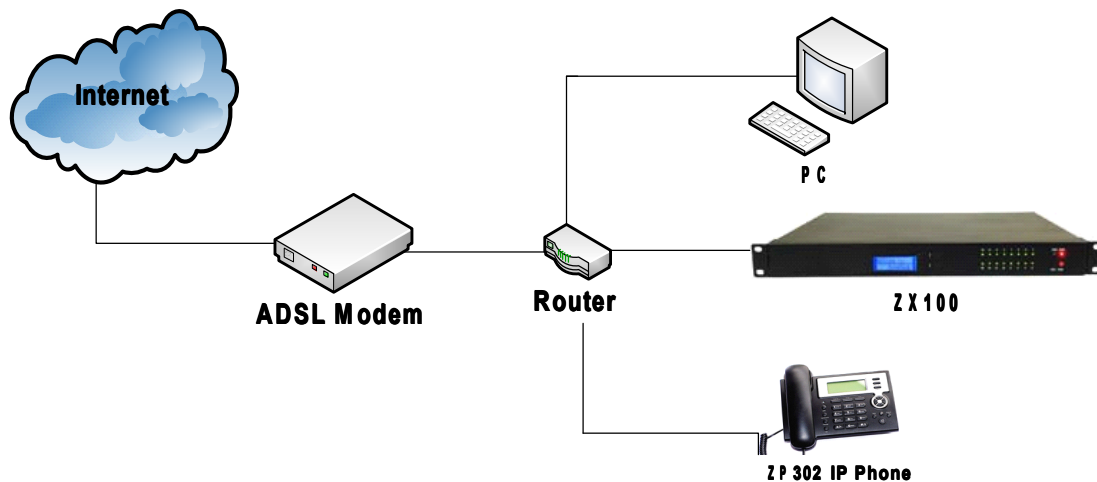

#### 10.1.2 IP PBX behind the Modem


If you have the public IP and want the IPPBX access the public network directly without router, then you should connect the Wan port of the IPPBX to the public network and connect HUB or Switch to the Lan ports of the IPPBX to let your PC access the public network..(If you want to access the public network through Modem, then you should use the PPPOE function of the IPPBX and let the IPPBX dial-up to connect the public network)

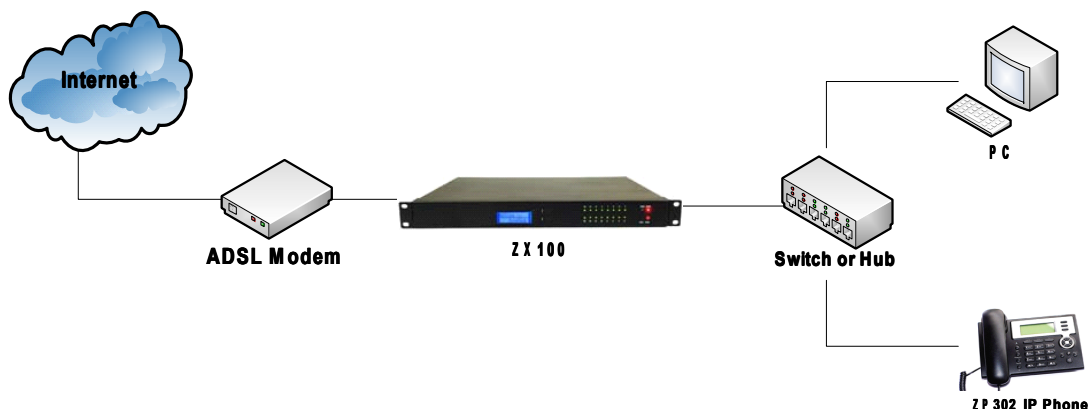




## 11.2 How to log in the IP PBX system

After connecting the ippbx to the local area network. Launch the web browser on a computer that is in this local area network. Enter the IP address for the system (default: Wan port IP address is <http://192.168.1.100:9999>, Lan port IP address is <http://192.168.10.100:9999>) . The start web page will appear like this:

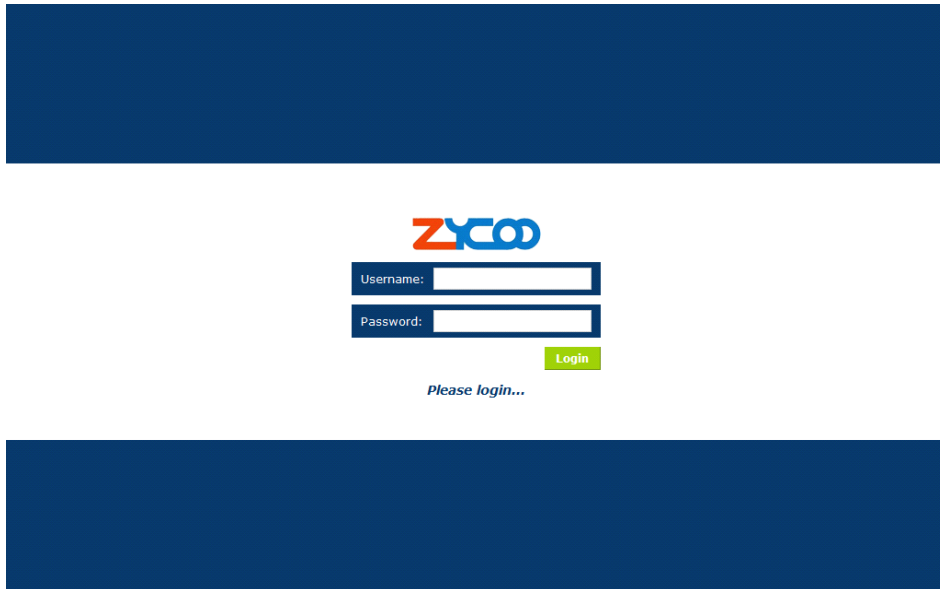

Enter Username and password (default username is [admin](#), password is [admin](#)), then click login. Once the login is successful, the home page will be display:

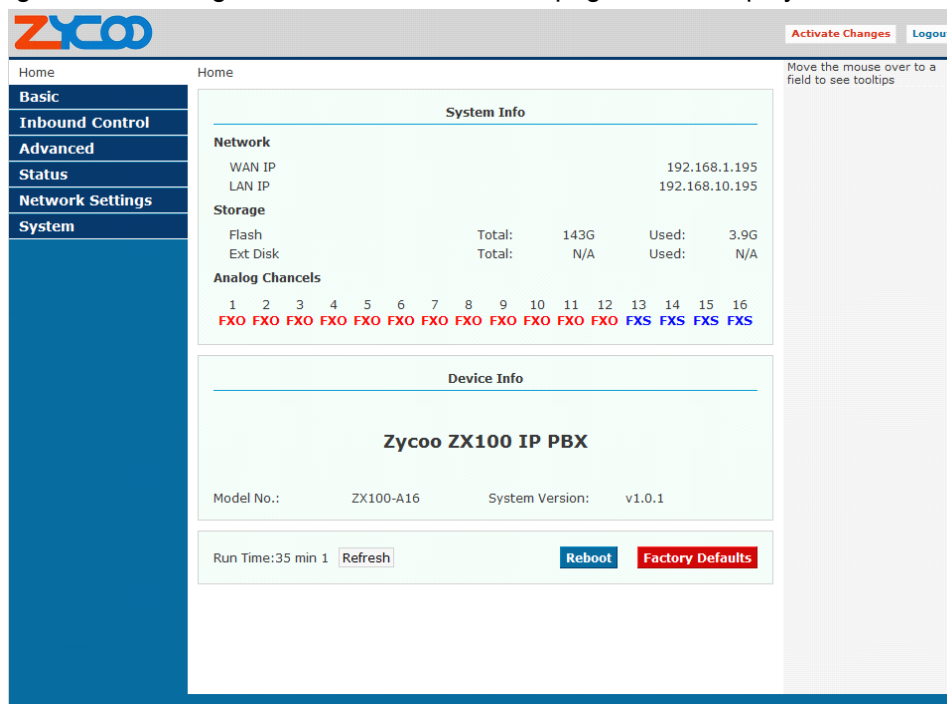

With the zycoo GUI, you can configure extensions, conference, voicemail, Outbound Routers and etc. Each page of the GUI has three columns:

The left column present all the options tab that you can program the system. Click the tab to go this kind of option setting page.

The middle column contains the primary content for each page.




The right column of the user interface contains Tooltips. This area provides brief description for any options of the GUI

The home page is used for logoff, Reboot and Factory Defaults.

- **Logout:** To log out the zycoo GUI.
- **Reboot:** Reboot the ZX100 system
- **Factory Defaults:** Restore all settings to factory default.
- **Activate change:** Made the change active for the current configuration after you make a configuration change on some page.

### 11.3 How to make a internal call

Making internal calls are the base requirement for a telephony system. Below are the settings for this usage. It is base on ZX100, but setting is the same in other ZX100 products.

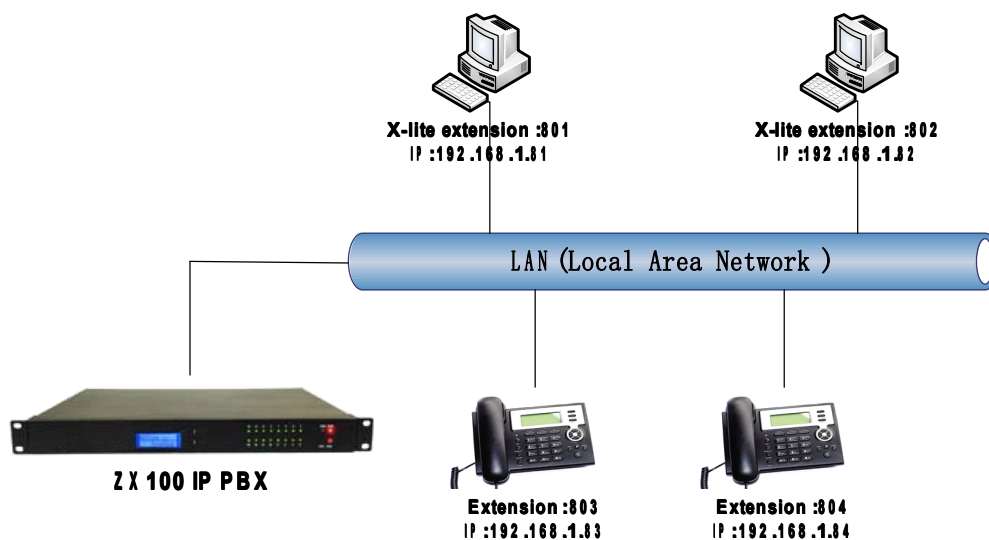

### Set User

**ZYCOO** Extension Configuration

Home Basic Extensions Trunks Outbound Routes Inbound Control Advanced Status Network Settings System

Extensions:

- 801 -- User1
- 802 -- User2
- 803 -- User3
- 804 -- User4
- 805 -- User5
- 806 -- User6
- 807 -- User7
- 808 -- User8
- 809 -- User9
- 810 -- User10
- 811 -- User11
- 812 -- User12
- 813 -- User13
- 814 -- User14
- 815 -- User15
- 816 -- User16
- 817 -- User17
- 818 -- User18
- 819 -- User19
- 820 -- User20
- 821 -- User21
- 822 -- User22
- 823 -- User23
- 824 -- User24
- 825 -- User25
- 826 -- User26
- 827 -- User27
- 828 -- User28

Extensions Setting:

Extension:

Name:

Password:

Caller ID:

VM Password:

E-mail:

Analog Phone:

Dial Plan:

Advance Options:

☐ Voicemail ☐ Can Reinstate

☐ SIP ☐ IAX

☐ Call Waiting ☐ 3-Way Calling

☐ NAT  Pickup Group

☐ Delete VMail  DTMFMode

Codecs Configure:

Voicemail: Check this box if the user should have a voicemail account.

Zycoo.® is a registered trademark of Zycoo, Inc. All Rights Reserved.



There are 30 default users, the extensions number are 801~830  
Set user, Extension is 803, Name, Password and Caller ID, etc  
Select Dial Plan is DialPlan1  
Set Extension 804 as the same way  
Use a IP Phone based SIP protocol registered with the user.  
Then you can use 803 call 804 successfully.

## 11.4 How to make an outbound call

To make an outbound call, we need to add a trunk first. There are two types of Trunk:


**Analog Ports:** FXO ports of ZX100, connect to PSTN lines.

**VoIP Trunk:** SIP or IAX trunk, connect to remote SIP/IAX server

I am using ZX100-A16, the port1-4 are configured as FXO ports. When a port is configured as FXO port, the corresponding LED shows **RED**. When a port is configured as FXS port, the corresponding LED shows **GREEN**.

### 11.4.1 Make call via PSTN trunk

You can use the PSTN trunking to make outgoing call via your outside line. The set up is as per below:

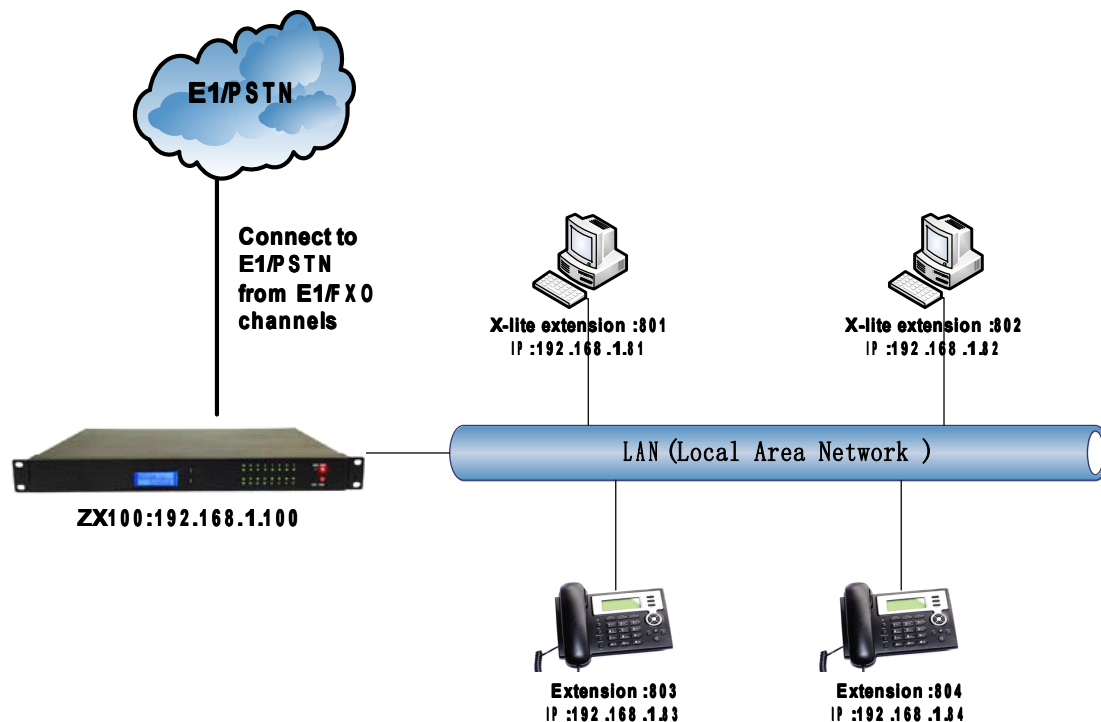

### Add Analog Trunk

Trunks -> Add a Trunk:



**Add Trunk**

Provider Type:

☒ Analog Trunk

☐ Custom Trunk

☐ Peer

Lines:

☐ Analog Port #5

☐ Analog Port #6

☐ Analog Port #7

☐ Analog Port #8

☐ Analog Port #9

☐ Analog Port #10

Save Cancel

### Add Outbound Routers

In Outbound Routers -> add a Dial rule as below

Dial Rules

**Add Dial Rule**

Rule Name: Call\_PSTN

Place this call through: Ports 1,2

Failover: None

PIN Set: ☐

Dialing Rules: If the number begins with 9 and followed by (more than) 3 digits (define a custom pattern)

Delete 1 digits from the front and auto-add digit before dialing

Save Cancel

We have now added a Dial rule "OUT\_PSTN" in the "DialPlan1".

As we can see from the dialing rule of "OUT\_PSTN", all numbers start with 9 will be cut the first digit ('9') and sent to PSTN (port1 or port3).

### Choose Dial Plan for extensions:


On the User page, edit the extensions to choose DialPlan1.



After we have done above, in the extension we can dial 9 + local number to dial out via PSTN line.

#### 11.4.2 Make call via VoIP trunk

Via the voip trunking we can dial call via the voip service to reduce our cost when making international calls.

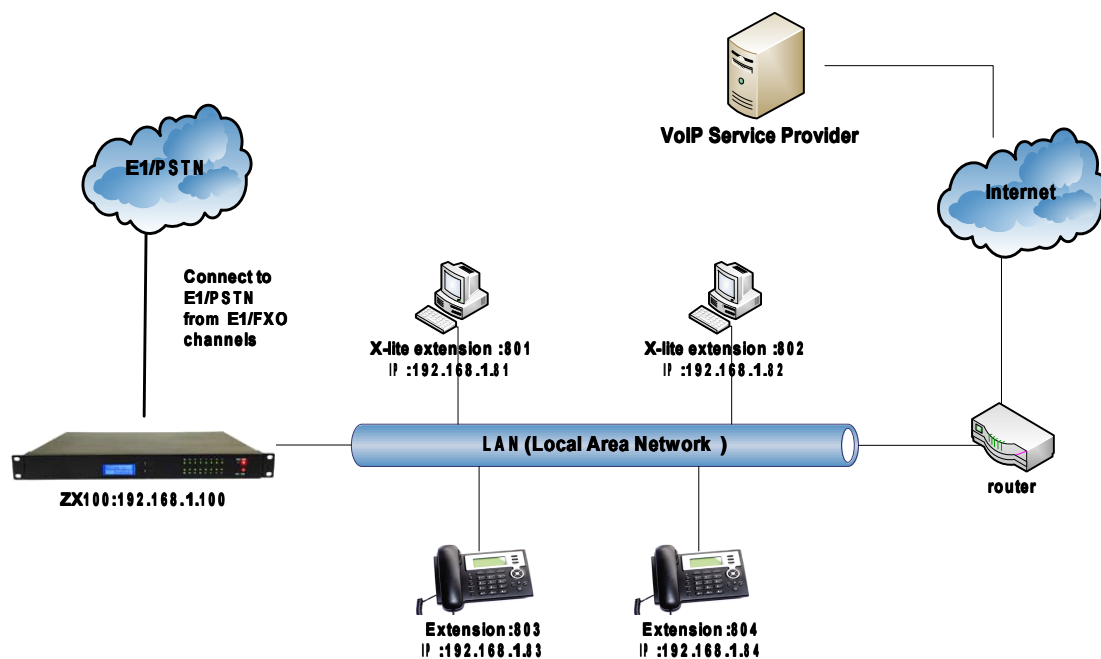

#### Add VoIP service provider

Trunk -> Add a Trunk:

Add a Custom Trunk.



**Trunk**

Activate Changes Logout

Home Basic Extensions Trunks Outbound Routes Inbound Control Advanced Status Network Settings System

List of Trunk

S.No	Trunk Name	Trunk Type	Trunk Description
1			

Add a Trunk

**Add Trunk**

Provider Type:

☐ Analog Trunk

☒ Custom Trunk

☐ Peer

Description: VoIP

Protocol: SIP

DialPlan: default

Register: ☐

Host: zycoo.dyndns.org

☐ Without Authentication

Username: zycootest

Password: .....

Save Cancel

Zycoo.® is a registered trademark of Zycoo, Inc. All Rights Reserved.

## Add Dial Rule

In Dial Rules -> add a new calling rule as below

### Dial Rules

**Dial Rules**

Activate Changes Logout

Home Basic Extensions Trunks Outbound Routes Inbound Control Advanced Status Network Settings System

List of DialPlans:

DialPlan	New	Delete
DialPlan1		

List of Dial Rules:

S.No	Rule Name	Rule Description
1	OUT_VoIP	

Add a Dial Rule

Rule Name: OUT\_VoIP

Place this call through: Custom - VoIP

Failover: None

PIN Set: ☐

Dialing Rules: If the number begins with 0 and followed by (more than) 3 digits (define a custom pattern)

Delete 1 digits from the front and auto-add digit before dialing

Save Cancel

Ex: Delete 1 digits from the front and prepend 256 before dialing

Zycoo.® is a registered trademark of Zycoo, Inc. All Rights Reserved.

Now we have added a new calling rule "Out\_VoIP" in the "DialPlan1".

As we can see from the "Out\_VoIP" dialing rule, all numbers start with 0 will be cut the first one digits ('0') and sent to my sip service provider.


The Out\_PSTN is in the same DialPlan1. Since we have added this dial plan to the extensions in above, we don't need to add dial plan again.

So when we have added two calling rules, any call start with 9 will be route to PSTN, and call starts with 0 will be route to VoIP.



## 11.5 How to make an incoming call

Add an Incoming call.

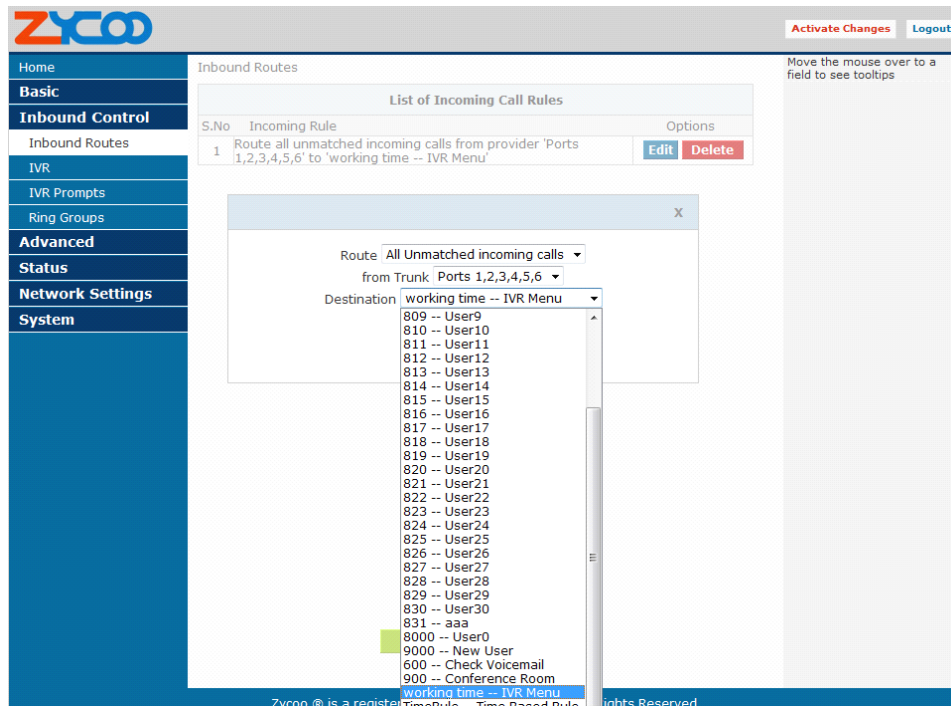

Select Route “All Unmatched incoming calls”

From provider “Port 1,2,3,4,5,6”


To extension “801 – User1” (here, you can select a extension, a IVR or others)

Then, if there is incoming call from Port 1,2,3,4,5,6 channel, the extension 801 will ring.

## 11.6 How to Set an incoming call to IVR based time rule

### Add record a custom voice

Record -> Record a new voice

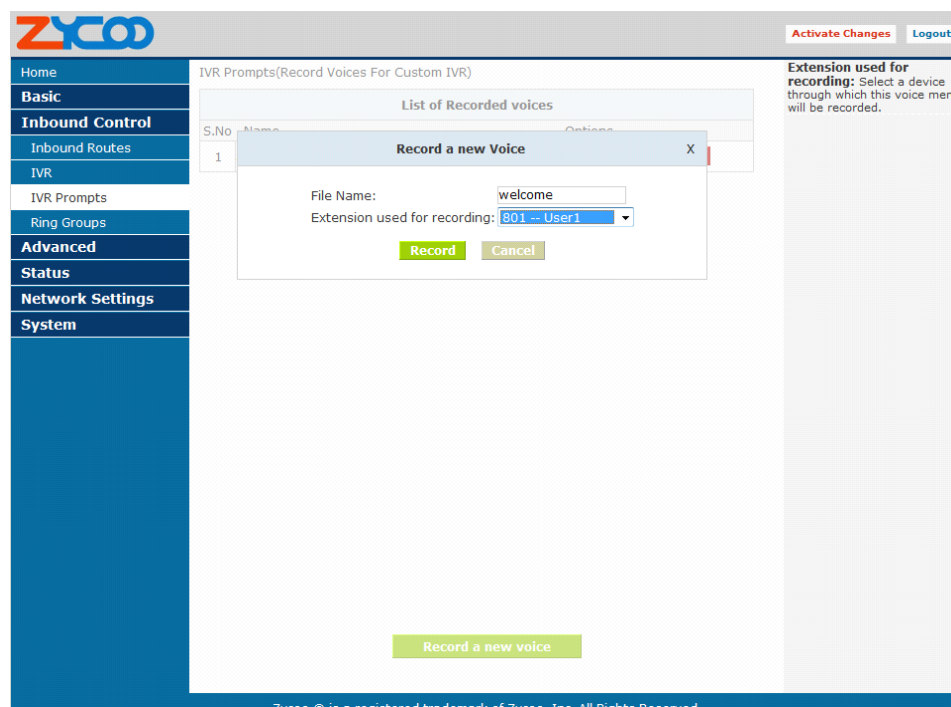

Set the record name is “Welcome”



Choose a extension used for recording, here we use EXT 801


Click Record button

Then, the extension 801 will ring

Pick up the phone record “Welcome” message


Then hangup and finish the record.

Use the same way to record “Closing” message

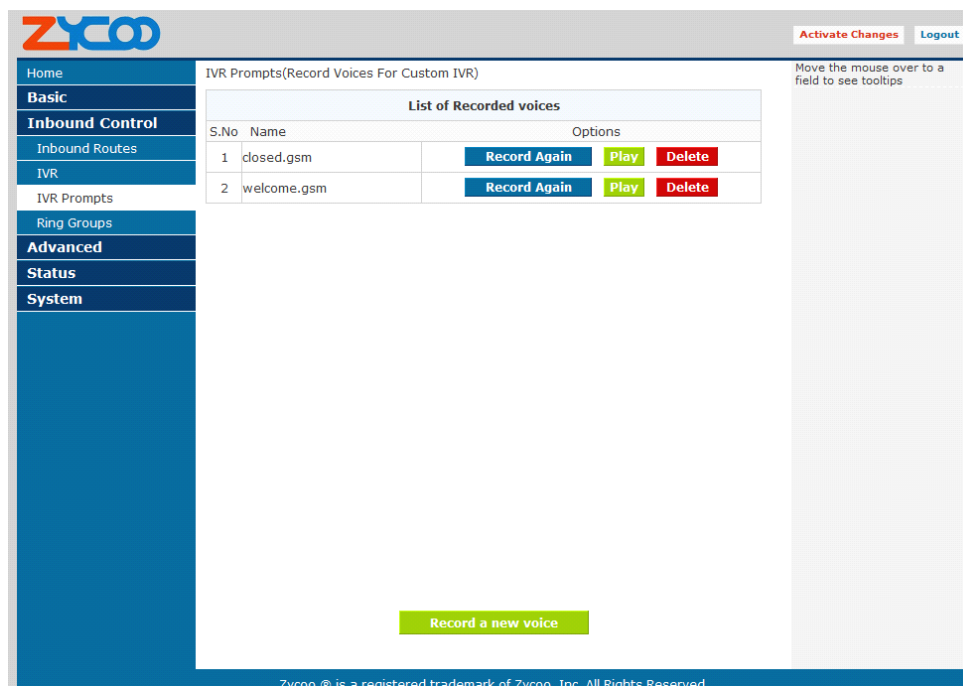

### **Add a Ring Group**

Ring Group -> New Ring Group

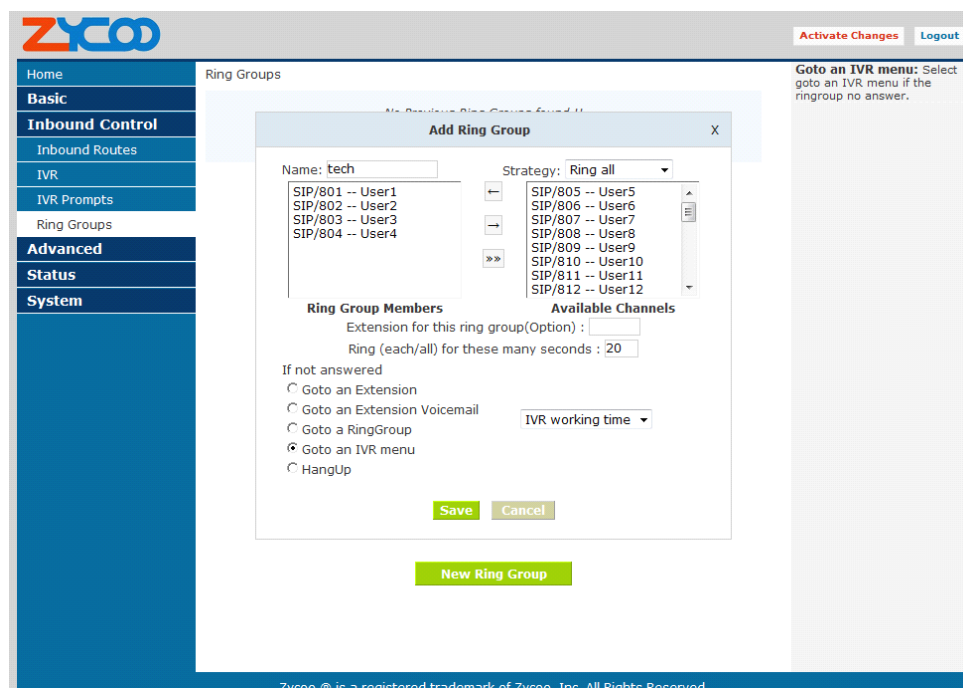

Example:

Name the ring group “tech”

Choose the group members whose extensions are “801, 802, 803, 804”



“if no answered”, choose “goto IVR”-- “working time”

Click “Save” button

### Set IVR

IVR

The screenshot shows the ZYCOO web interface for configuring IVR. On the left is a navigation menu with options: Home, Basic, Inbound Control, Inbound Routes, IVR, IVR Prompts, Ring Groups, Advanced, Status, and System. The main area is titled 'IVR' and contains two panels. The 'IVR Menu' panel on the left lists 'IVR - working time' (selected) and 'IVR - closed time'. Below it are 'New' and 'Delete' buttons. The 'IVR Setting' panel on the right is for the selected 'working time' menu. It includes fields for 'Name' (working time) and 'Extension'. Under 'Welcome Message', 'Please Select' is set to 'welcome' and 'Dial other Extensions?' is checked. The 'Keypress' Events table is as follows:

Key	Action	Extension
0	Goto Extension	801
1	Goto Extension	802
2	Goto RingGroup	tech
3	Disabled	
4	Disabled	
5	Disabled	
6	Disabled	
7	Disabled	
8	Disabled	
9	Disabled	

At the bottom right of the 'IVR Setting' panel are 'Save' and 'Cancel' buttons. The footer of the interface states: 'Zycop.® is a registered trademark of Zycop. Inc. All Rights Reserved.'

Select IVR-working time, Set welcome message is “Welcome”

Set keypress' Events

Dial “0” go to extension 805

Dial “1” go to extension 806

Dial “2” go to ringgroup tech

Click Save button

This screenshot shows the same ZYCOO web interface, but now the 'IVR - closed time' menu item is selected in the 'IVR Menu' panel. The 'IVR Setting' panel is updated accordingly. The 'Name' field is 'closed time'. Under 'Welcome Message', 'Please Select' is now 'closed' and 'Dial other Extensions?' is unchecked. The 'Keypress' Events table is updated as follows:

Key	Action	Extension
0	Goto Extension	801
1	Disabled	
2	Disabled	
3	Disabled	
4	Disabled	
5	Disabled	
6	Disabled	
7	Disabled	
8	Disabled	
9	Disabled	

The 'Save' and 'Cancel' buttons remain at the bottom right. The footer text is the same: 'Zycop.® is a registered trademark of Zycop. Inc. All Rights Reserved.'

Then set IVR-closed time



Set welcome message is "Closing"

### Add a Time Rule

Time Based Rules -> New Time Rule

The screenshot shows the Zycoo web interface. On the left is a navigation menu with options like Home, Basic, Inbound Control, Advanced, Options, Voicemail, Conferencing, Music on hold, Music on Ringback, Call Parking, DISA, Follow Me, Paging and Intercom, Time Based Rules, Status, and System. The main area is titled 'Time Based Rules' and contains a 'List of Ring Groups' table with columns S.No, RuleName, and Options. An 'Edit Time Rule' dialog box is open, showing the configuration for a rule named 'Incoming'. The dialog includes sections for 'Time & Date Conditions' and 'Destination'. The 'Destination' section has two dropdowns: 'if time matches: VoiceMenu working time' and 'if time did not match: VoiceMenu closed time'. At the bottom of the dialog are 'Save' and 'Cancel' buttons. Below the dialog, on the main page, is a 'New Time Rule' button. The footer of the interface states 'Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.'

Set a Rule Name, eg: incoming

Set the Time & Date Conditions

"If time matches" --- go to "working time"

"If time not match" --- go to "closed time"

Click the save button, saved the configuration

### Add a Trunk

Trunks -> add a Trunk

The screenshot shows the Zycoo web interface. On the left is a navigation menu with options like Home, Basic, Extensions, Outbound Routes, Inbound Control, Advanced, Status, Network Settings, and System. The main area is titled 'Trunk' and contains a 'List of Trunk' table with columns S.No and Options. An 'Add Trunk' dialog box is open, showing the configuration for a new trunk. The dialog includes a 'Provider Type' section with radio buttons for 'Analog Trunk' (selected), 'Custom Trunk', and 'Peer'. There is a 'Lines' section with a list of analog ports from #5 to #10, each with a checkbox. At the bottom of the dialog are 'Save' and 'Cancel' buttons. Below the dialog, on the main page, is an 'Add a Trunk' button. The footer of the interface states 'Zycoo ® is a registered trademark of Zycoo, Inc. All Rights Reserved.'



## Add an incoming router

Inbound routers -> add an incoming rule

The screenshot shows the ZYCOO web interface for configuring inbound routes. A modal dialog is open for adding a new rule. The dialog contains the following fields:

- Route: All Unmatched incoming calls
- from Trunk: Ports 1,2,3,4,5,6
- Destination: Incoming -- Time Based Rule

Buttons: Save, Cancel

The background interface shows a table of existing rules:

S.No	Incoming Rule	Options
1	Route all unmatched incoming calls from provider 'Ports 1,2,3,4,5,6' to 'working time -- IVR Menu'	Edit Delete

At the bottom of the modal, there is a button: Add an Incoming Rule.

Select Route: All Unmatched incoming calls

From provider: Ports 1,2,3,4,5,6

To extension: incoming—Time Based Rule

The screenshot shows the ZYCOO web interface after the rule has been added. The table of existing rules now contains two entries:

S.No	Incoming Rule	Options
1	Route all unmatched incoming calls from provider 'Ports 1,2,3,4,5,6' to 'working time -- IVR Menu'	Edit Delete
2	Route all unmatched incoming calls from provider 'Ports 1,2,3,4,5,6' to 'Incoming -- Time Based Rule'	Edit Delete


The 'Activate Changes' button is now visible in the top right corner of the interface.

Then click Activate Changes, Made the change active for the current configuration

## 11.7 How to link two ZX100 IPPBX in the same network

We start from linking two the IP PBX in the same network and then try to expand to different network. Below is the structure of how to link two IPPBX in the same LAN:



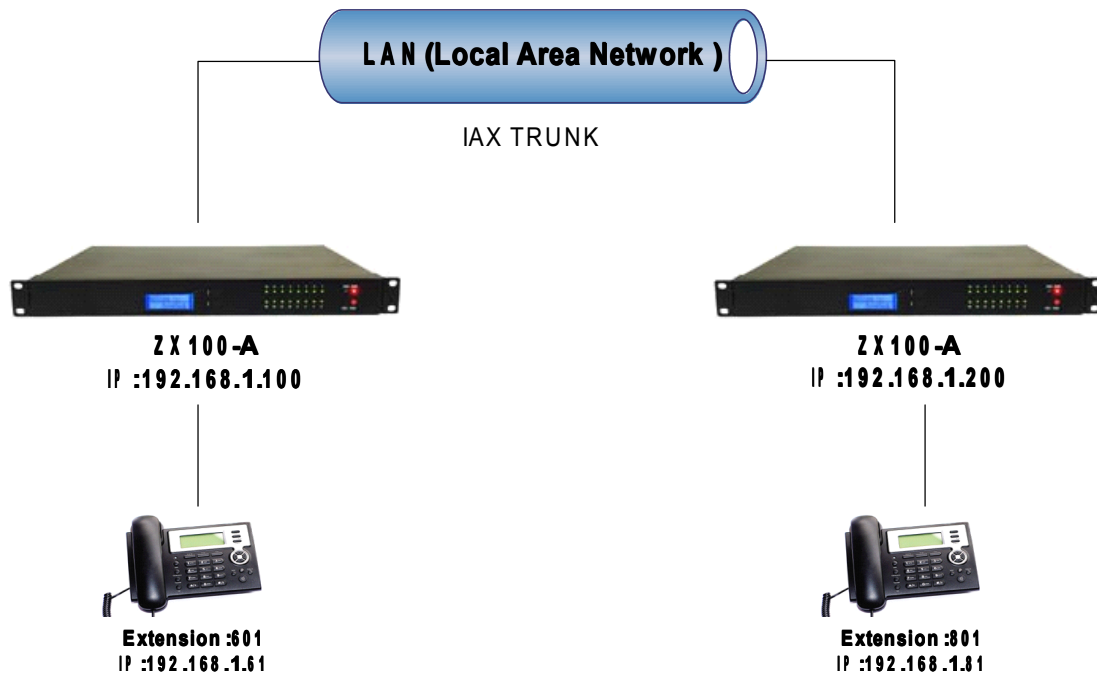

Register the ZX100-A as an peer in ZX100-B(via IAX2 trunk),so the extensions in ZX100-A can make calls to ZX100-B's extensions via this "special" trunk.

In above structure:

1. ZP302A registers to ZX100-A as an extension 601.
2. ZP302B registers to ZX100-B as an extension 801.
3. All the extensions under ZX100-A are in the format 6XX.
4. All the extensions under ZX100-B are in the format 8XX
5. Extensions under ZX100-A can make calls to extension under ZX100-B use format 8XX.
6. Extensions under ZX100-B can make calls to extension under ZX100-A use format 6XX.

### **Step 1:** Set up a peer 699 in ZX100-A

In the page Trunks → Add a Trunk

**Add Trunk** X

**Provider Type:**

☐ Analog Trunk

☐ Custom Trunk

☒ Peer

Peer Name:

Protocol:

DialPlan:

Host:

☐ Without Authentication

Username:

Password:

Peer Name: ZX100B ;

Peer Username: 699 Account of this Peer

Password: 699 IAX2 Log on password

Advance Options: Select IAX protocol

### **Step 2:** Set up an IAX trunk in ZX100-B to link to ZX100-A via this ZX100B Peer.



In the page Trunks--> Add a Trunk

**Step 3:** Set Dial Rule in ZX100-B, all calls start with 6 will be sent to ZX100-A.

In the page: Outbound Routers --> Add a Dial Rule

**Step 4:** Set the user 601 and Dial Plan in ZX100-A.

In the page: Extensions → Dial Plan

Active the change and apply the test:

1. Register an IP phone ZP302B to ZX100-B with 801 extension.
2. Register an IP phone ZP302A to ZX100-A with 601 extension.
3. Use 801 to dial 601. And you can see 601 will ring and you can pick up the calls.

Above is the way to router ZX100-B's call to ZX100-A,

Accordingly, if you want to call from ZX100-A to ZX100-B, continue as follow:

**Step 5:** Set Dial Rule in ZX100-A all calls start with 8 will be sent to ZX100-B.



X

Rule Name:

Place this call through :

Failover :

PIN Set: ☐

Dialing Rules : If the number begins with  and followed by (☒ more than)  digits (define a custom pattern)

Delete  digits from the front and auto-add digit  before dialing

**Step 6:** Set the user 801 and Dial Plan in ZX100-B

**Extensions Setting:**

Extension:

Name:

Password:

Caller ID:

VM Password:

E-mail:

Analog Phone:


Dial Plan:

Active the change and apply the test:

Use 601 to dial 801, and you can see 801 will ring and you can pick up the calls.

## 11.8 How to link two IPPBX in different network

The generally environment for two ZX100 in different location is: two the ZX100 IP PBX are both in the internet and using the public IP.

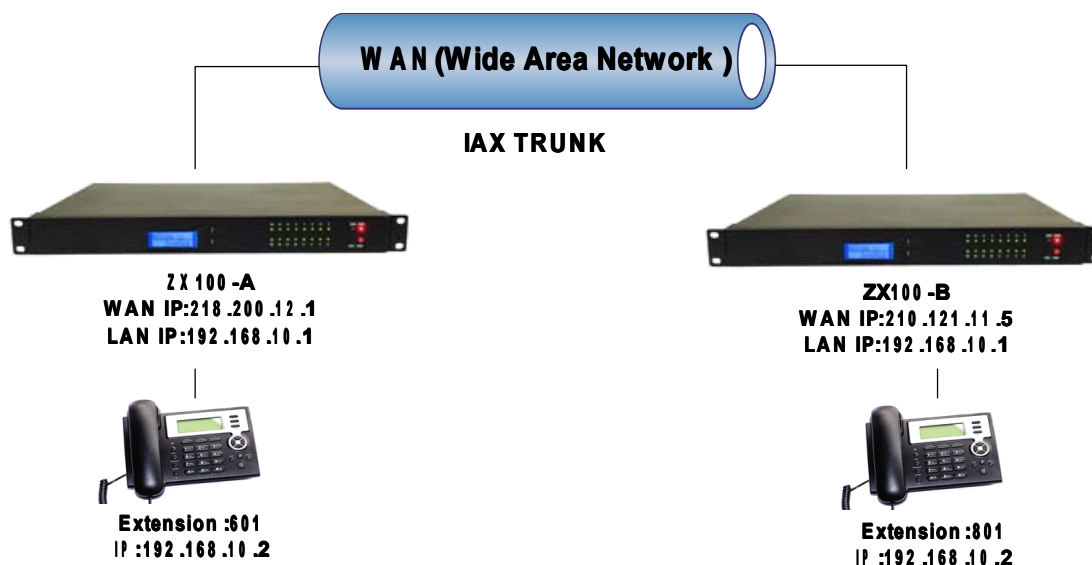


The configuration is same with above guide(10.7) "Link two ZX100 IP pbx in the same network but use the public IP address as the "HOST" settings, like the bellow:

In the page Trunks of ZX100-B--> Add a Trunk



<b>Provider Type:</b> <input type="radio"/> Analog Trunk <input checked="" type="radio"/> Custom Trunk <input type="radio"/> Peer	Description: <input type="text" value="Call_ZX100A"/> Protocol: <input type="text" value="IAX"/> DialPlan: <input type="text" value="default"/> Register: <input checked="" type="checkbox"/> Host: <input type="text" value="218.200.12.1"/> <input type="checkbox"/> Without Authentication Username: <input type="text" value="699"/> Password: <input type="text" value="..."/>
--	--

The generally environment for two ZX100 IP PBX in different location and one or both two are both behind router and using the private IP. So, we need to do port forwarding in the router and make ZX100 IP PBX can reach to each other.

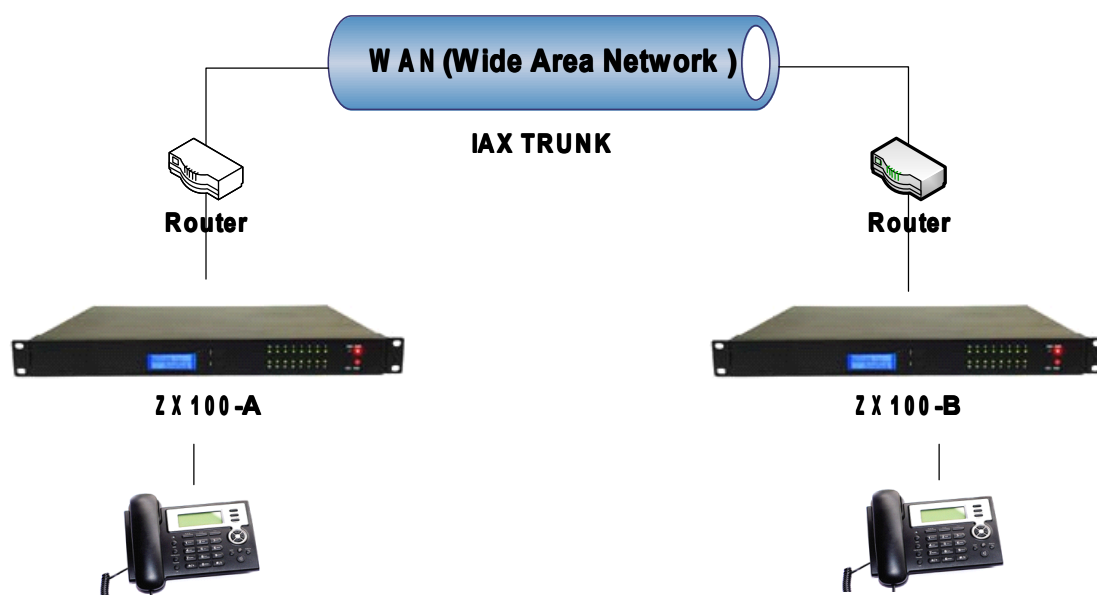

**Step 1:** Set port forwarding in the router for ZX100-A

For the ZX100-A is behind the router, you need to forward the IAX2 port in your router, so all the packets received on the router WAN port (210.11.25.127:4569) will be forwarded to the ZX100-A (192.168.1.21:4569). Below is the setting page in a linksys router:



Application	Ext.Port	TCP	UDP	Int.Port	IP Address	Enabled
FTP	21	<input checked="" type="radio"/>	<input type="radio"/>	21	192.168.1.0	<input type="checkbox"/>
Telnet	23	<input checked="" type="radio"/>	<input type="radio"/>	23	192.168.1.0	<input type="checkbox"/>
SMTP	25	<input checked="" type="radio"/>	<input type="radio"/>	25	192.168.1.0	<input type="checkbox"/>
DNS	53	<input type="radio"/>	<input checked="" type="radio"/>	53	192.168.1.0	<input type="checkbox"/>
TFTP	69	<input type="radio"/>	<input checked="" type="radio"/>	69	192.168.1.0	<input type="checkbox"/>
finger	79	<input checked="" type="radio"/>	<input type="radio"/>	79	192.168.1.0	<input type="checkbox"/>
HTTP	80	<input checked="" type="radio"/>	<input type="radio"/>	80	192.168.1.199	<input checked="" type="checkbox"/>
POP3	110	<input checked="" type="radio"/>	<input type="radio"/>	110	192.168.1.0	<input type="checkbox"/>
NNTP	119	<input checked="" type="radio"/>	<input type="radio"/>	119	192.168.1.0	<input type="checkbox"/>
SNMP	161	<input type="radio"/>	<input checked="" type="radio"/>	161	192.168.1.0	<input type="checkbox"/>
ssh	2020	<input checked="" type="radio"/>	<input type="radio"/>	22	192.168.1.235	<input checked="" type="checkbox"/>
http1	8080	<input checked="" type="radio"/>	<input type="radio"/>	80	192.168.1.29	<input checked="" type="checkbox"/>
http2	8090	<input checked="" type="radio"/>	<input type="radio"/>	80	192.168.1.209	<input checked="" type="checkbox"/>
IAX	4569	<input checked="" type="radio"/>	<input type="radio"/>	4569	192.168.1.21	<input checked="" type="checkbox"/>
IAX2	4569	<input type="radio"/>	<input checked="" type="radio"/>	4569	192.168.1.21	<input checked="" type="checkbox"/>

**UPnP Forwarding**

UPnP Forwarding can be used to set up public services on your network. When users from the Internet make certain requests on your network, the Router can forward those requests to computers equipped to handle the requests. If, for example, you set the port number 80 (HTTP) to be forwarded to IP Address 192.168.1.2, then all HTTP requests from outside users will be forwarded to 192.168.1.2. It is recommended that the computer use static IP address.

You may use this function to establish a Web server or FTP server via an IP Gateway. In this format, Windows XP can be used to configure this through UPnP communication. Be sure that you enter a valid IP Address. (You may need to establish a static IP address with your ISP in order to properly run an Internet service. For added security,

[More...](#)

### Step 2: Set up the Provider Host in ZX100-B

Set up the service provider and calling rule in ZX100-B to make it register to ZX100-A. This method is almost the same as above, EXCEPT you need to use the 210.11.25.127 as the service provider instead of 192.168.1.21.

### Step 3: Set port forwarding in the router for ZX100-B

Use the same method as Step 1 do port forwarding in router-B for ZX100-B as above.

### Setp4: Link two ZX100 and make calls

 
Accordingly, set the 601 users in ZX100-A and 801 users in ZX100-B, and build the correct dial rules as above, you can make calls between two the ZX100 IP PBX.

**Noted:** You can also apply a DDNS to get one fixed domain for both ZX100 IP PBX and connect to each other rather than use the Port Forwarding in the router.

## 11.9 How to resolve problems about hearing only on one side

If your IPPBX behind the Router, you should build a IP Address Map to resolve this problem as follow:

Management---->Show Advanced Options ----> Global SIP Settings



--->NAT Support



## NAT Support

Extern ip: Extern Host: Extern Refresh: Local Network Address: NAT mode: Allow RTP Reinvite: 


- [Extern IP](#) Replace with your external IP address this your public IP or domain
- [Extern Host](#) Replace with your external IP address this your public IP or domain
- [Extern Refresh](#) Set time for fresh, default 10
- [Local Network Address](#) Replace with your local network address and mask
- [NAT mode](#) If your IPPBX behind the Router, set default yes



## Chapter12 How to use Skype account in ZX100

### 12.1 Register for Skype Manager

1. Visit [skype.com/business](http://skype.com/business) and click **Skype Manager**

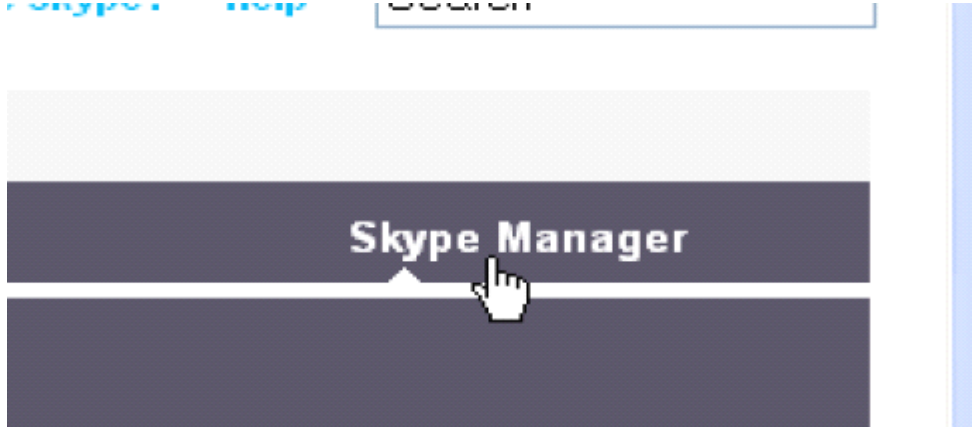


2. Complete the on-screen instructions to register for Skype Manager. You can either use your existing personal account or create a new one specifically for your Skype Manager.
7. Please bear in mind that the account you use to register will be used to administer products and credit throughout your business. We therefore recommend that you create a new Skype account using your business name.

### 12.2 Create a SIP Profile and buy a Channel Subscription

**Note:** You need to be signed into Skype Manager to access the Skype for SIP settings.


1. Click **Features** in the toolbar

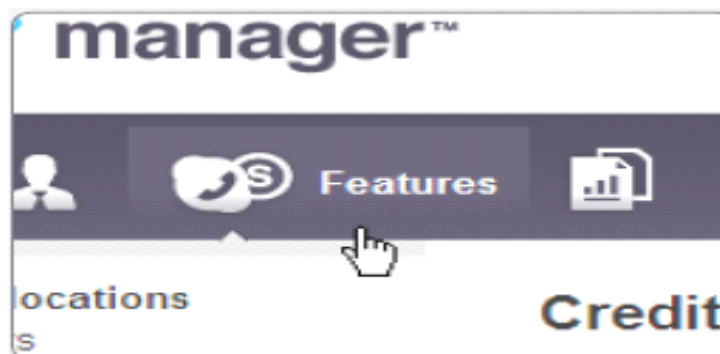


2. In the **Features** menu on the left, click **Skype for SIP**.
3. Click **Create a new profile**.
4. Give your SIP Profile a friendly name so it's easier to remember and click on Next. Your Profile's registration details, including its username and password are displayed. Make a note of these details so that you can set up and configure your PBX.



### Authentication details



Please choose the method of authentication needed for your PBX.

**Registration**  
(Username/password)

or, IP Authentication ?

SIP User	99050000015459
Password	4j9x7i7Ybggv8g <a href="#">Generate a new password</a>
Skype for SIP address	sip.skype.com
UDP Port	5060

5. Click **Profile settings**.
6. Click **Buy a channel subscription to activate this profile**.
7. Enter the number of channels you require and click **Buy now**.
8. Channel subscriptions are the amount of concurrent calls you would like to use with your SIP Profile. These channels are charged on a monthly basis.
9. If you don't want to make outbound calls with Skype for SIP, please proceed to step 6.

### 12.3 Allocate Skype Credit to the SIP Profile

1. Click **View profile** next to the name of the SIP Profile to which you want to allocate credit.
2. Click **Set up outgoing calls**.
3. Enter the amount of Skype Credit you want to allocate to the SIP Profile and click **Add credit**.



## Profile settings



Profile name	Profile 5	▼
Calling channels	<a href="#">Buy a channel subscription to activate this profile</a>	
Outgoing calls	<a href="#">Set up outgoing calls</a>	×
<div> <div>Add credit</div> <div>Auto-Recharge settings</div> </div>		
<div>  € 10.00           <div>Add credit</div> </div>		
Caller ID	<a href="#">Set up Caller ID</a>	▼
Incoming calls	<a href="#">Add a number or business account</a>	▼

4. If you want to enable **auto-recharging**, click on the Auto-Recharge settings tab, enter the recharge amount and the minimum balance required before recharging, then click **Save changes**.

## 12.4 Configure your Skype for SIP certified PBX for outbound calls

In the trunk of our IPPBX setting:

<b>Provider Type:</b> <input type="radio"/> Analog Trunk <input checked="" type="radio"/> Custom Trunk <input type="radio"/> Peer	Description: <input type="text" value="skype"/> Protocol: <input type="text" value="SIP"/> DialPlan: <input type="text" value="default"/> Register: <input checked="" type="checkbox"/> Host: <input type="text" value="sip.skype.com"/> <input type="checkbox"/> Without Authentication Username: <input type="text" value="9905000001545"/> Password: <input type="password" value="••••••••••"/>
--	--

**Save** **Cancel**

Outbound setting of our IPPBX:



X

Rule Name:

Place this call through :

Failover :

PIN Set: ☐

Dialing Rules : If the number begins with  and followed by (☒ more than)  digits (define a custom pattern)

Delete  digits from the front and auto-add digit  before dialing

## 12.5 Make an outbound call

After we have done above, in the extension we can dial 00 + Country Code + City Area Code + local number to dial out via skype line

For example: Dial number 00862885337096 will contact our company.

## 12.6 Configure your Skype for SIP certified PBX for inbound calling

Inbound Routing of our IPPBX:

X

Route


from Trunk

Destination

## 12.7 Set up a business account to test inbound calls from people with Skype

1. Create a new business account in Skype Manager. For more information on creating a new business account, please see the [Skype Manager User Guide](#).
2. Click **View profile** next to the name of the SIP Profile to which you want to add the business account.
3. Click **Add a number or business account**.
4. In the **Add business account** tab, enter the newly created business.



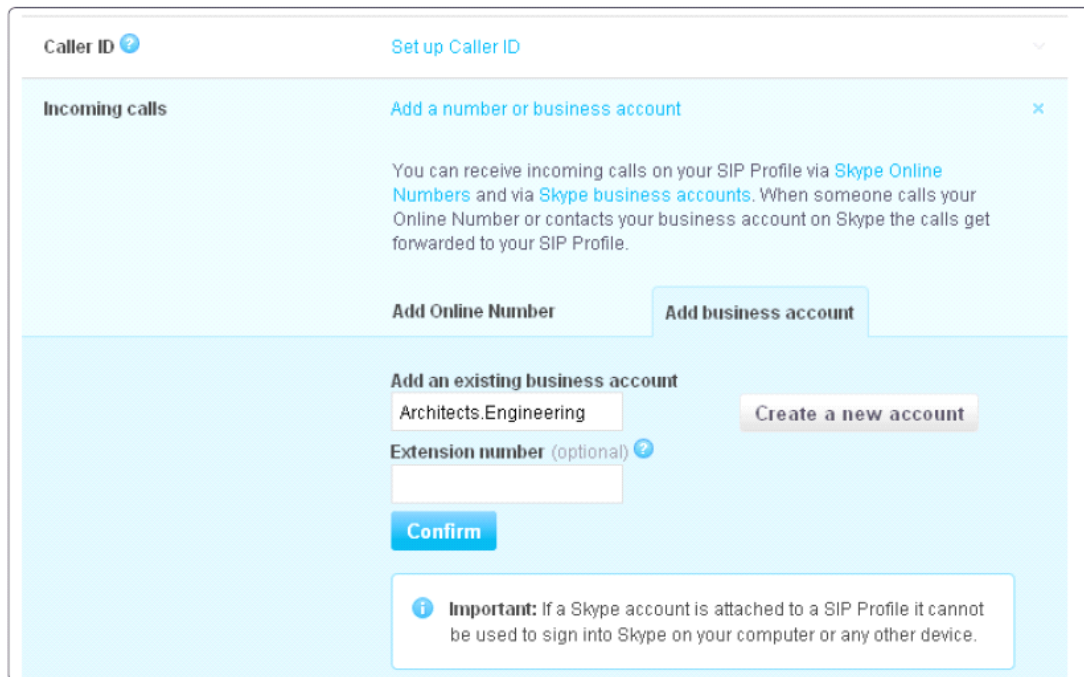


5. Click Confirm.

## 12.8 Make a test inbound call from Skype

Call the business account's Skype Name you created in step 7 from Skype.

## 12.9 Assign an Online Number to receive calls from landlines and mobile phones

1. Click **View profile** next to the name of the SIP Profile to which you want to assign an Online Number.
2. Click **Add a number or business account**.
3. Click **Buy a new number**

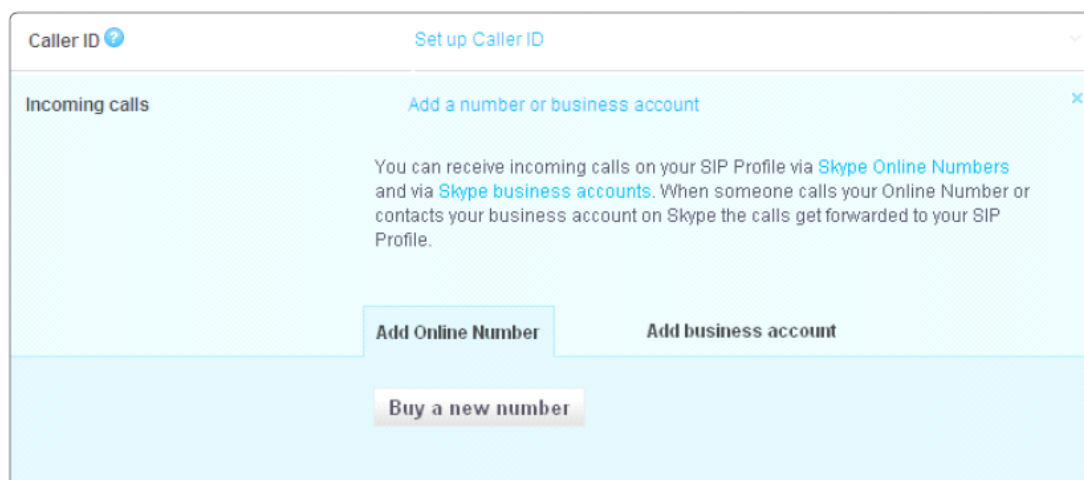

## 12.10 Make a test inbound call from a landline or mobile phone

Call the Online Number associated with the SIP Profile from a landline or mobile phone.





You have now successfully set up Skype for SIP for use with your Skype for SIP certified PBX.

For more help with setting up and using Skype for SIP, please see [support.skype.com](http://support.skype.com) or check the [skype for sip user guide](#)